




STEP
4

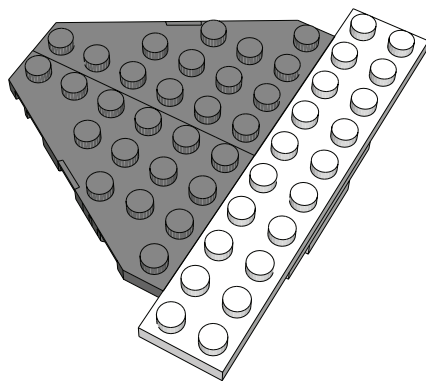


STEP
5

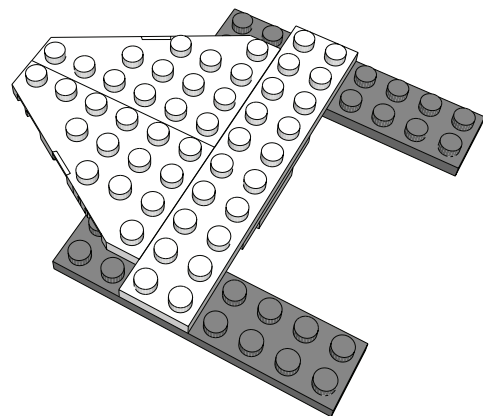


STEP
6

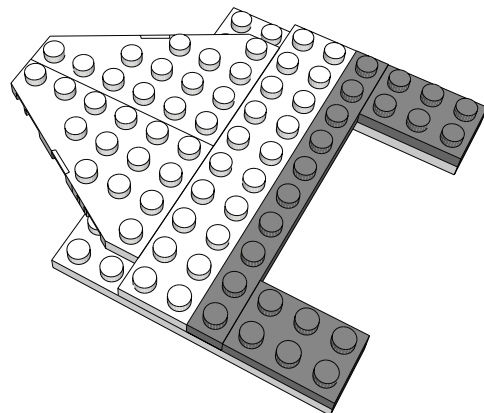

STEP
7

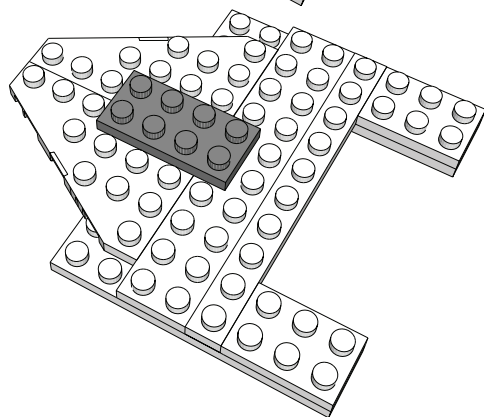


STEP
8

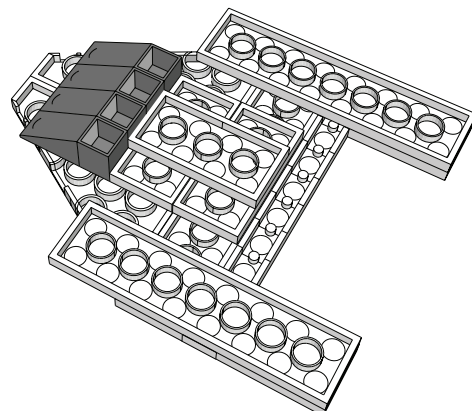


B


STEP
9

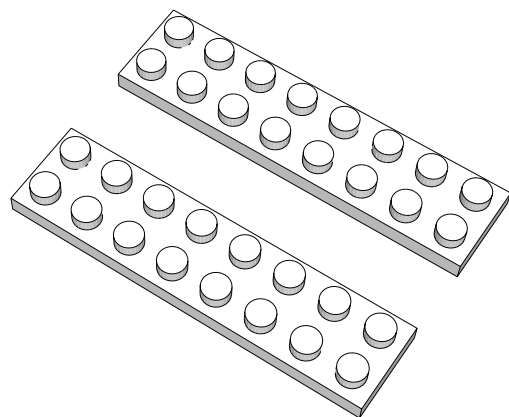


STEP
10

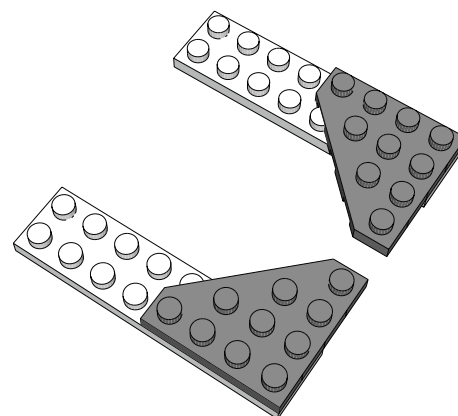


STEP
11

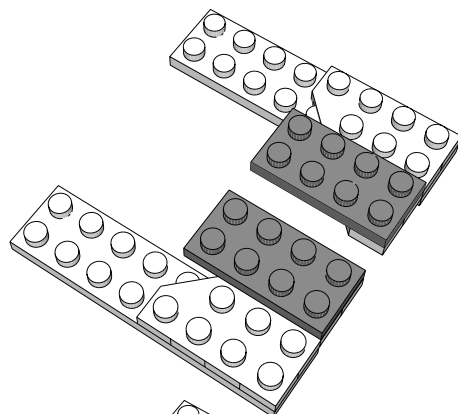


STEP
12

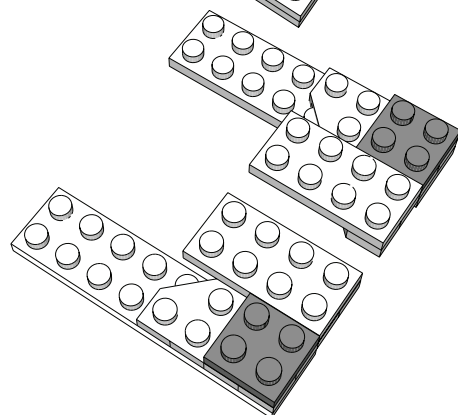

STEP
13

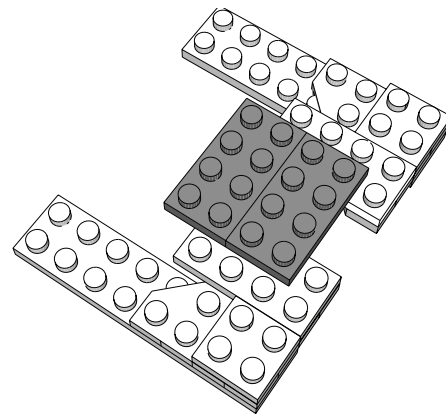


STEP
14

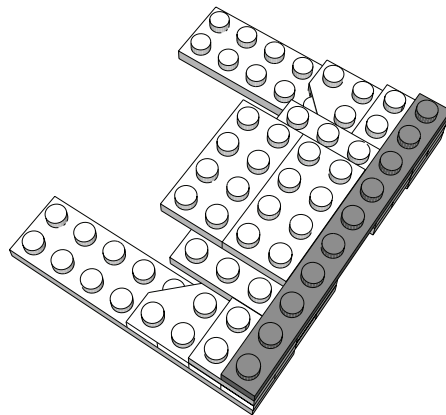


C


STEP
15

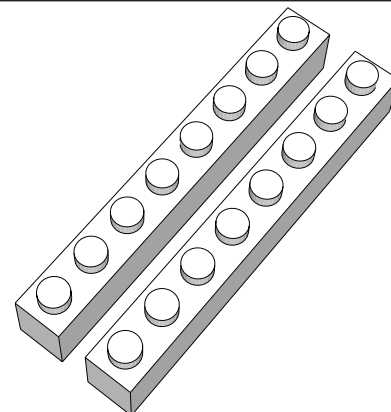


STEP
16

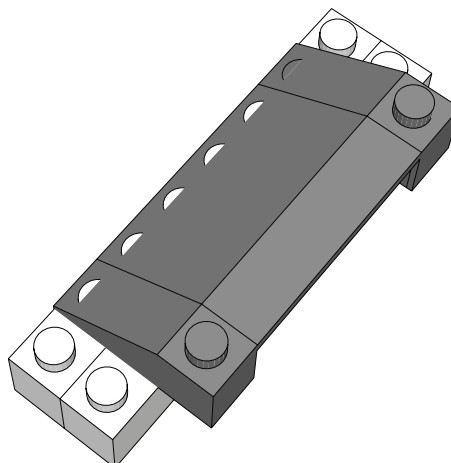

STEP
17

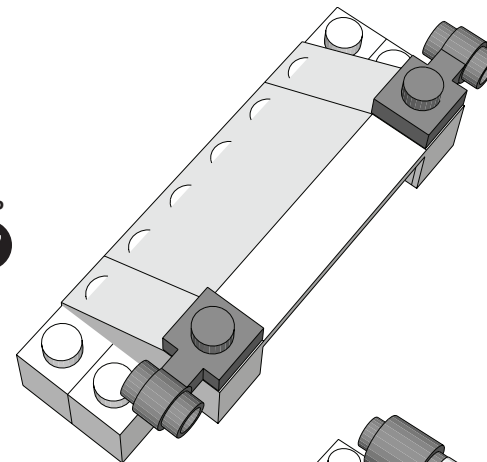


STEP
18

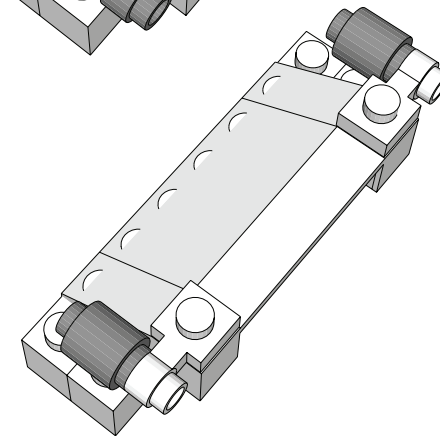


D


STEP
19

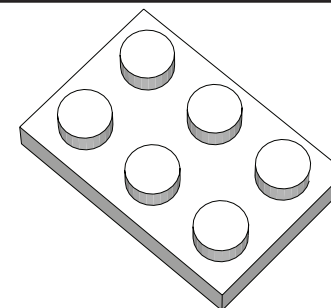


STEP
20

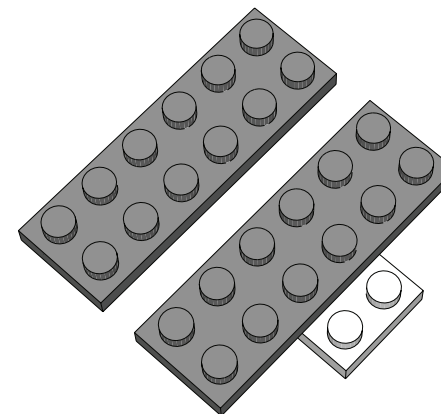


STEP
21

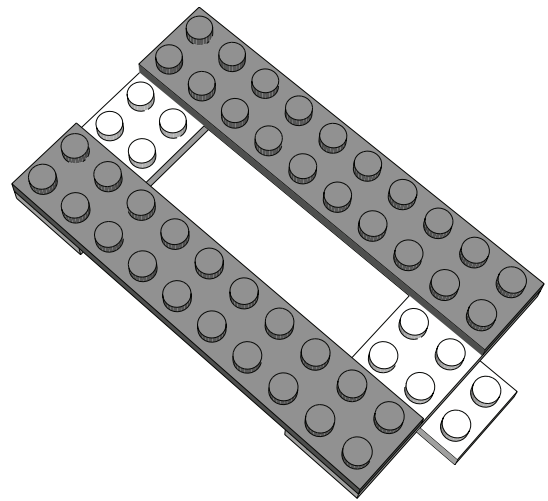


STEP
22

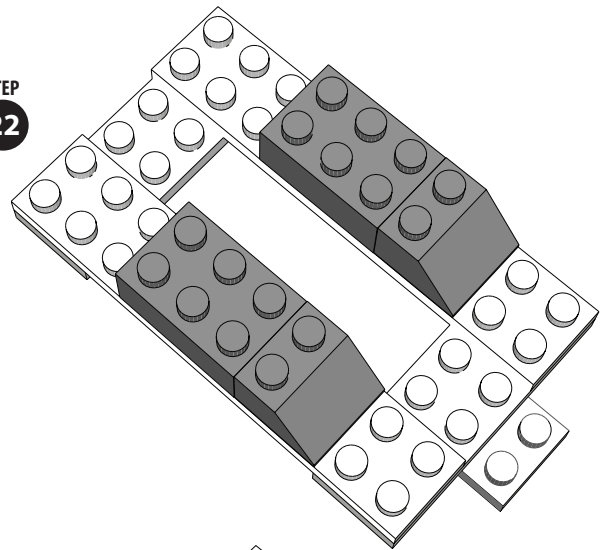


STEP
23

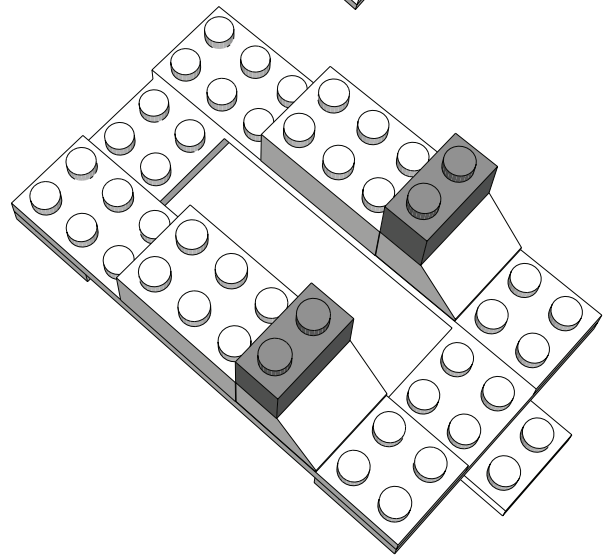


STEP
24

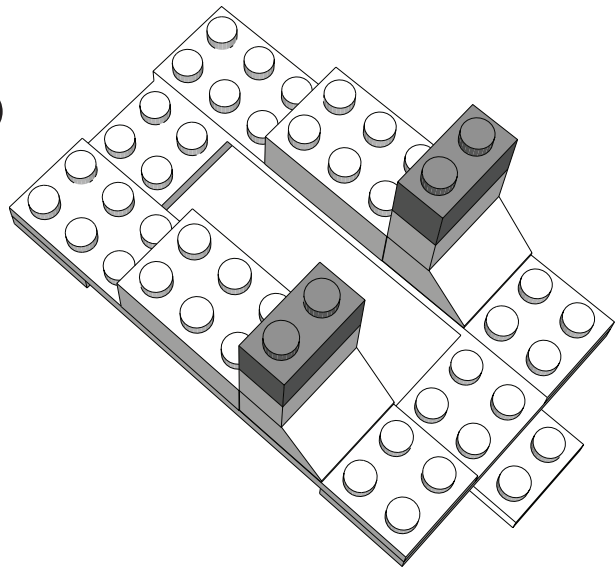


E

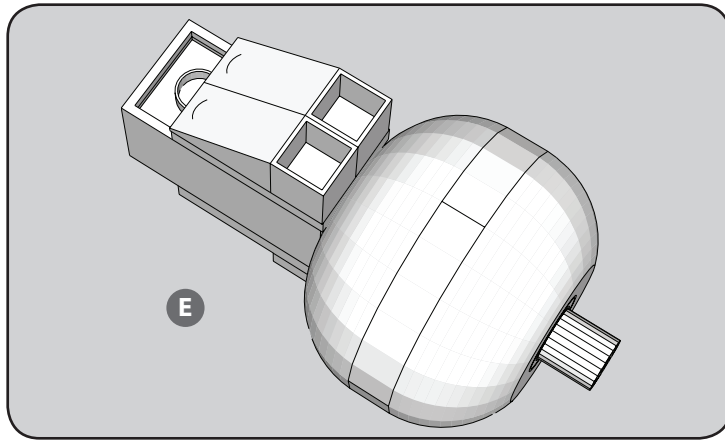


STEP
25

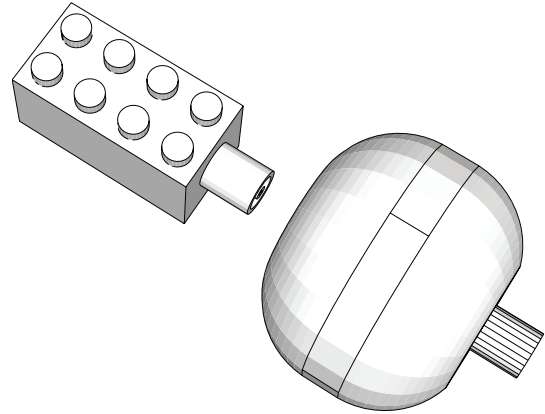


STEP
26

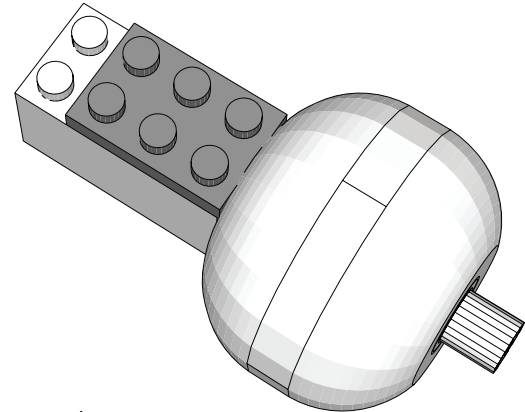


STEP
27

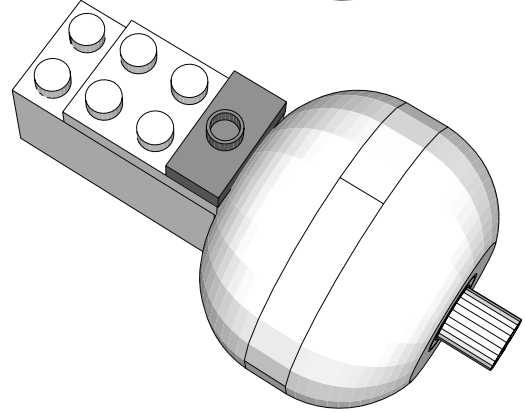


STEP
28

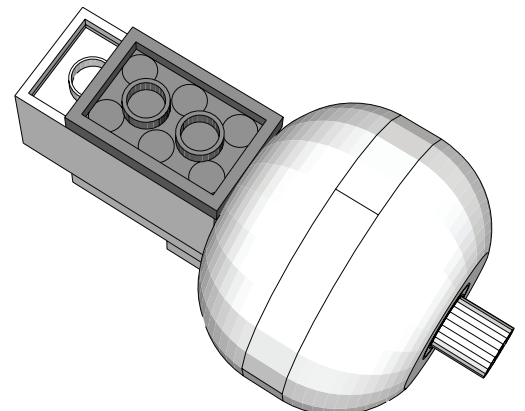


STEP
29

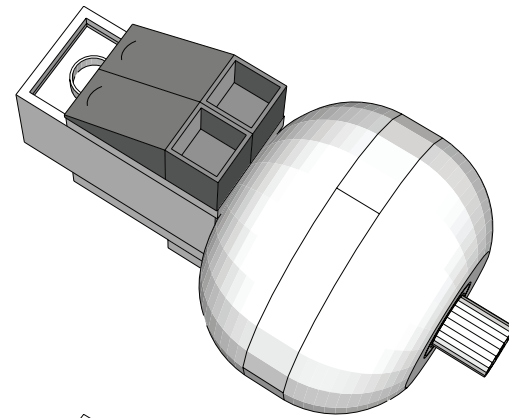


STEP
30

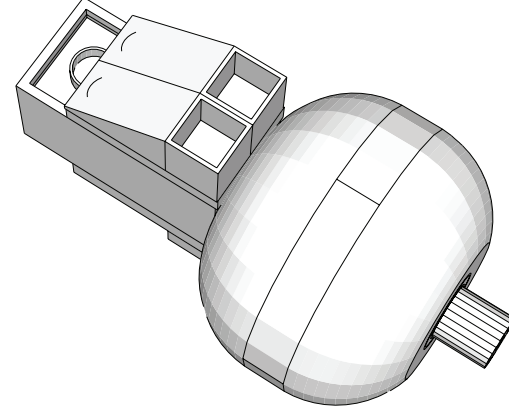


F

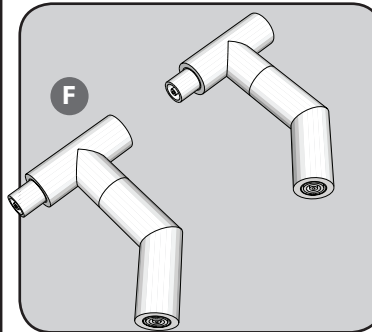


STEP
31

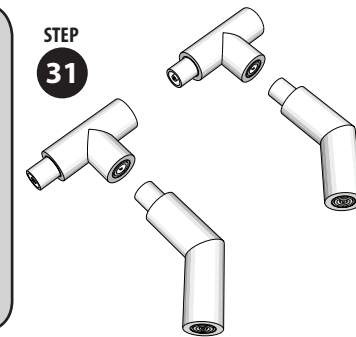

G

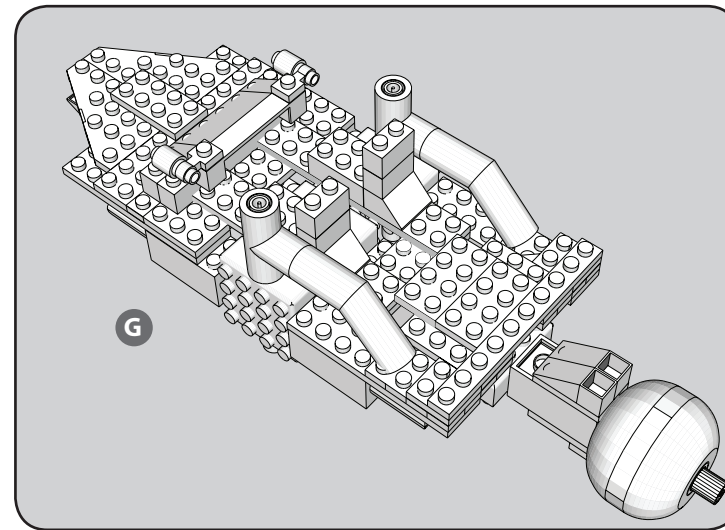


STEP
32

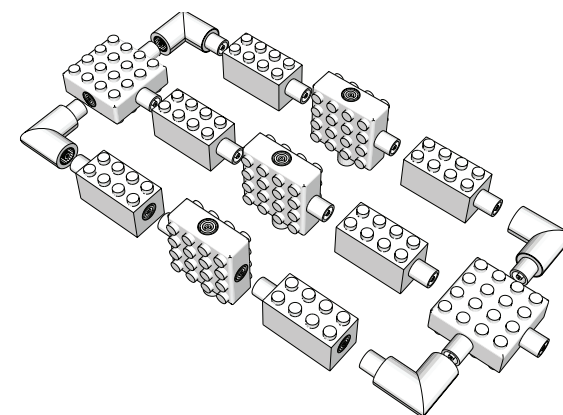

STEP
33

COMBINE

D

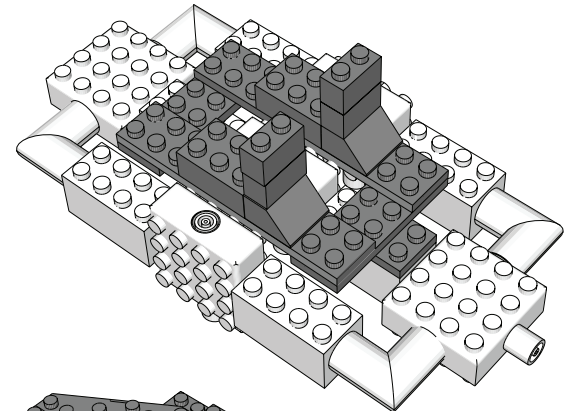


STEP
34

COMBINE

A

B

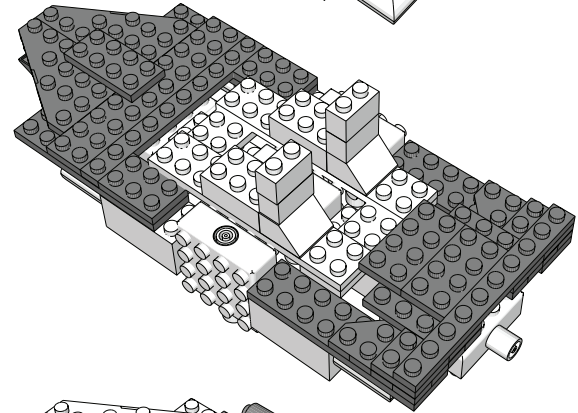


STEP
35

COMBINE

C


F

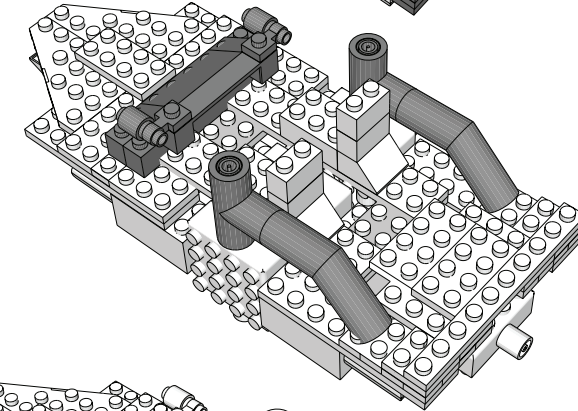

STEP
36

COMBINE

E

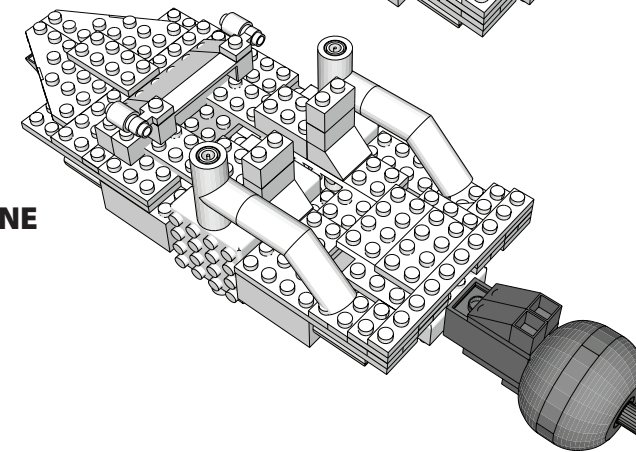

AFFIX MODEL TO 3D LITE BOARD

STEP
37

