




STEP
4

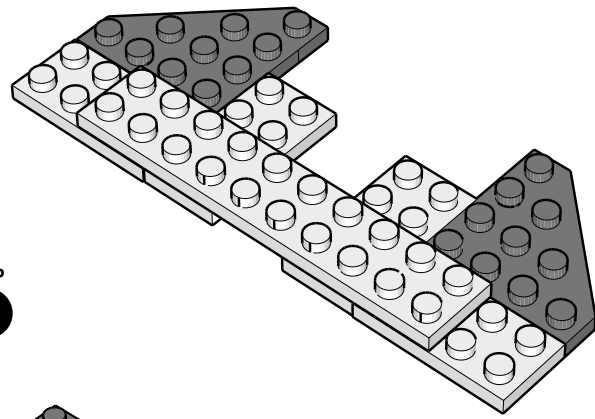


STEP
5

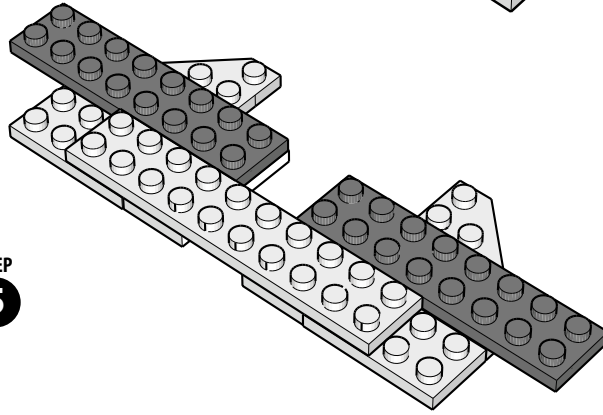


STEP
6

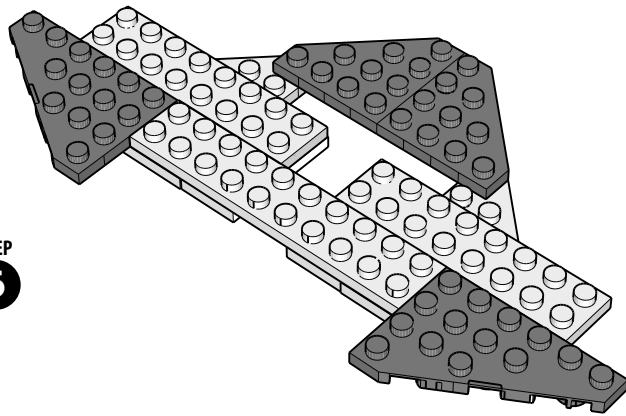


B

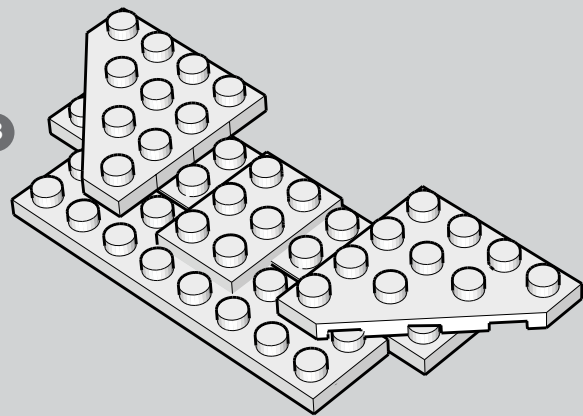


STEP
7

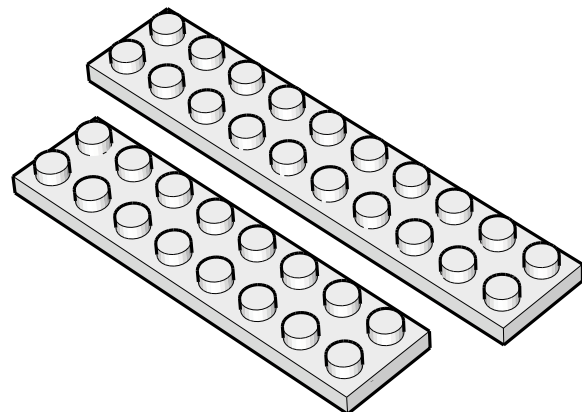


STEP
8

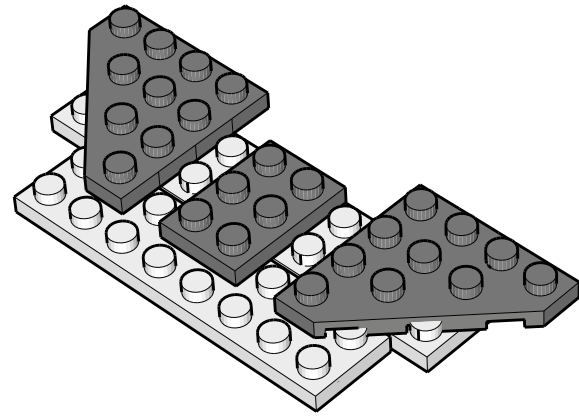


STEP
9

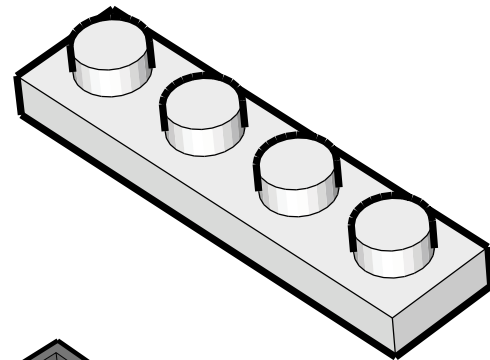

STEP
10

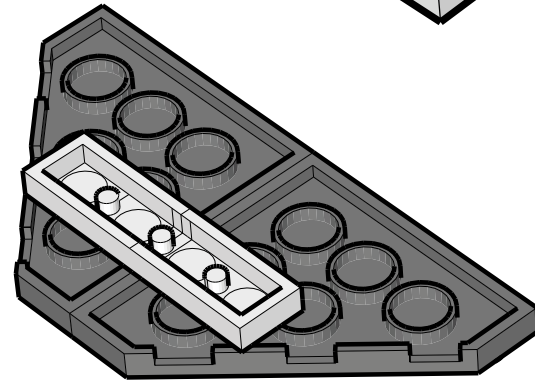


D

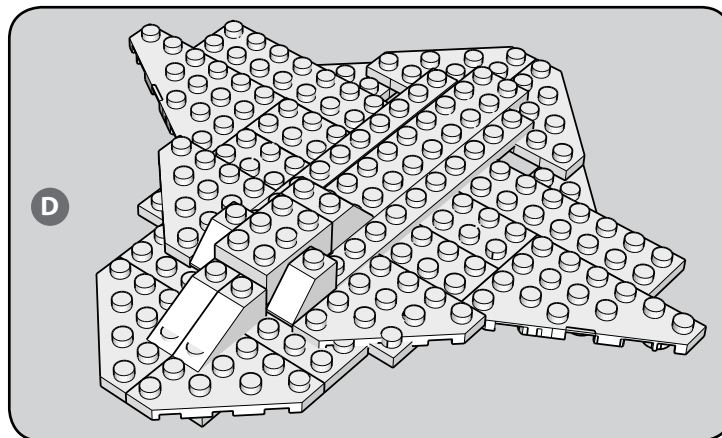


STEP
11

COMBINE


A B

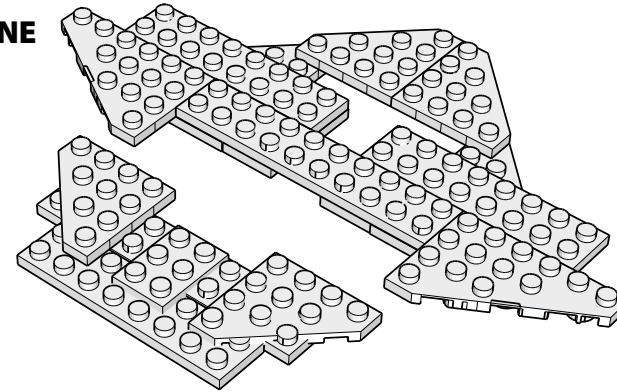


STEP
12

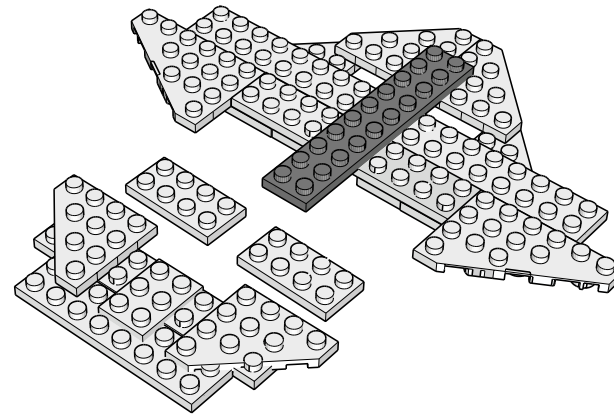


STEP
13

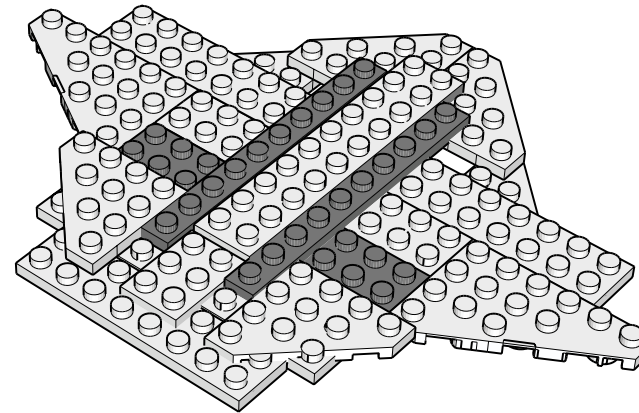

STEP
14

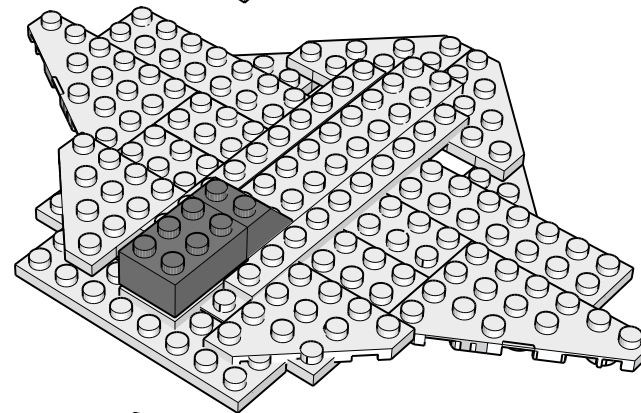


STEP
15

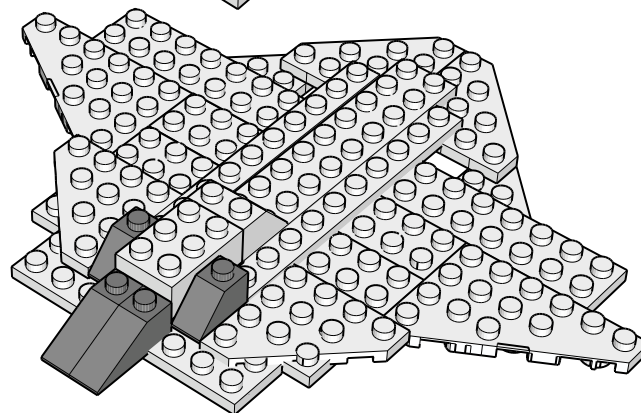


STEP
16

COMBINE


C

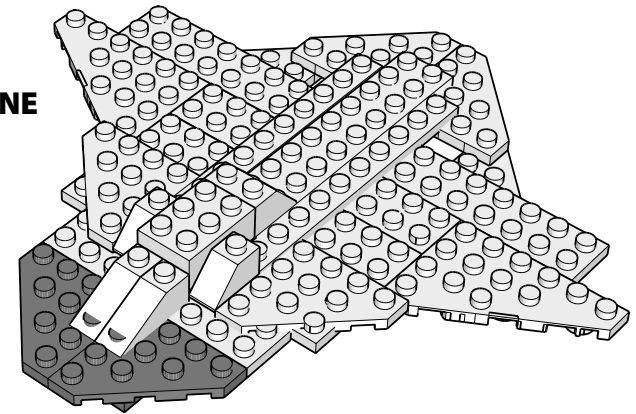


STEP
17

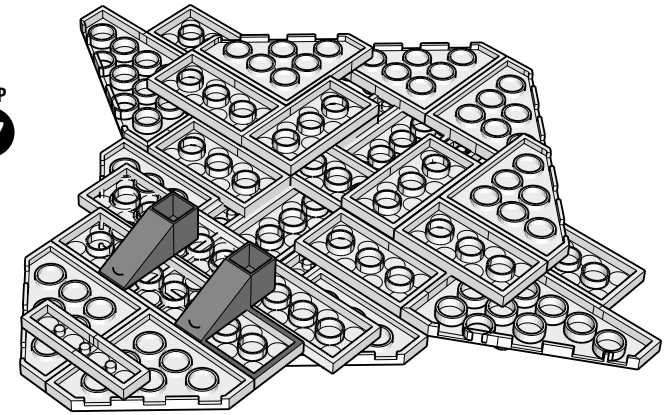


STEP
18

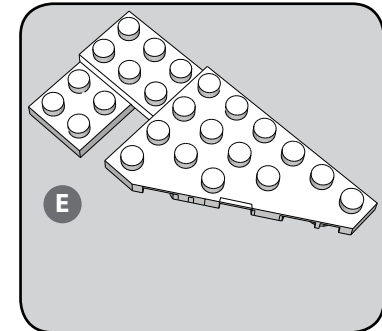


STEP
19

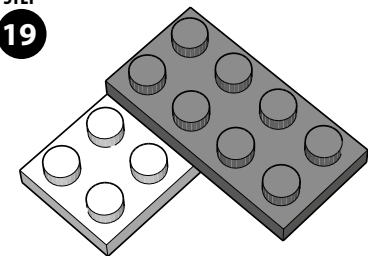


STEP
20

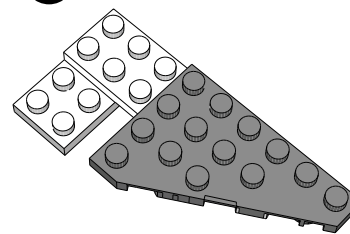


STEP
21

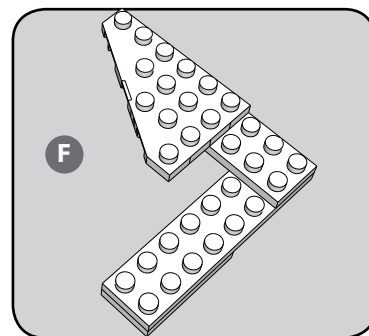


F

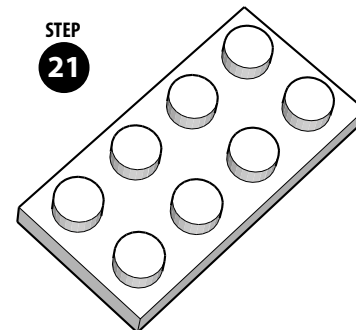


STEP
22

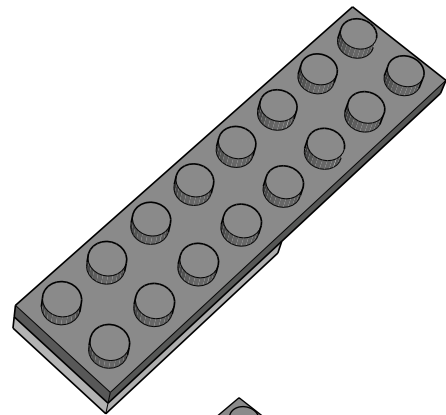


STEP
23

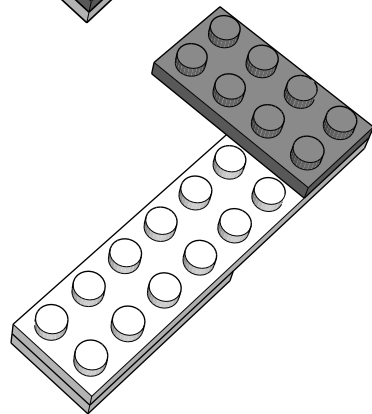


STEP
24

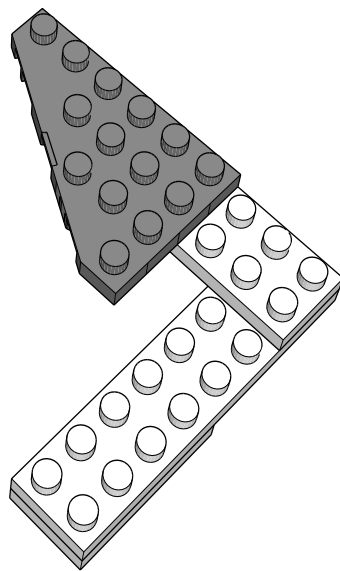


STEP
25

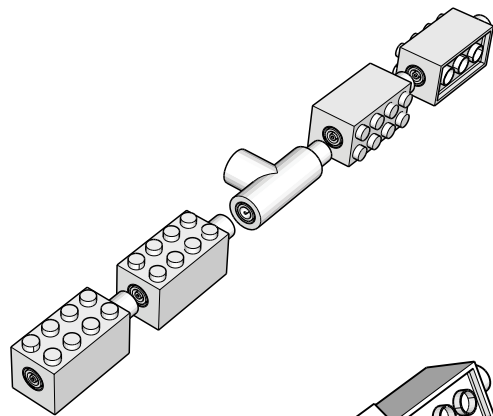


STEP
26

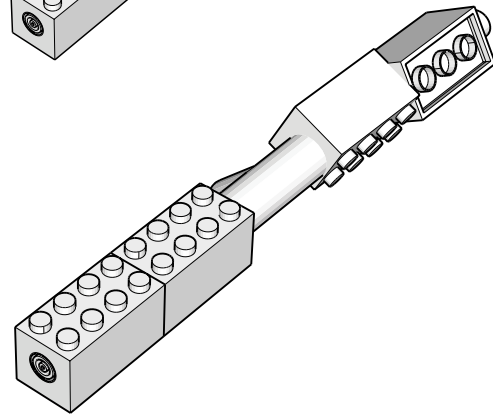


STEP
27
COMBINE
D

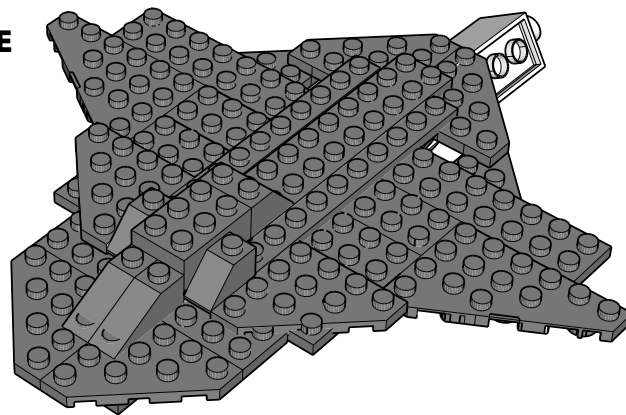

STEP
28
COMBINE
E F

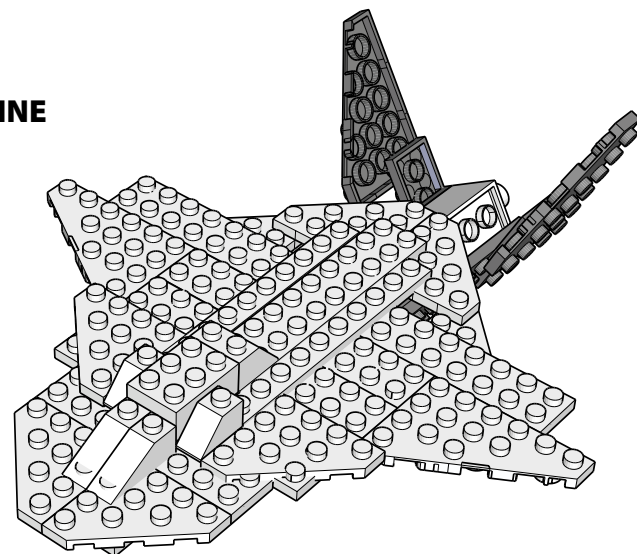


H

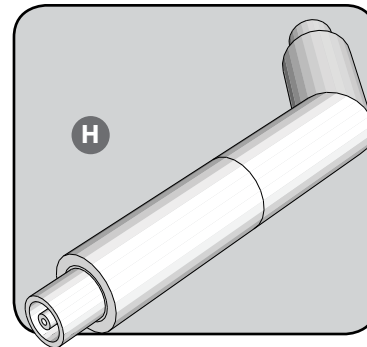

STEP
29

COMBINE
G

AFFIX MODEL TO 3D LITE BOARD

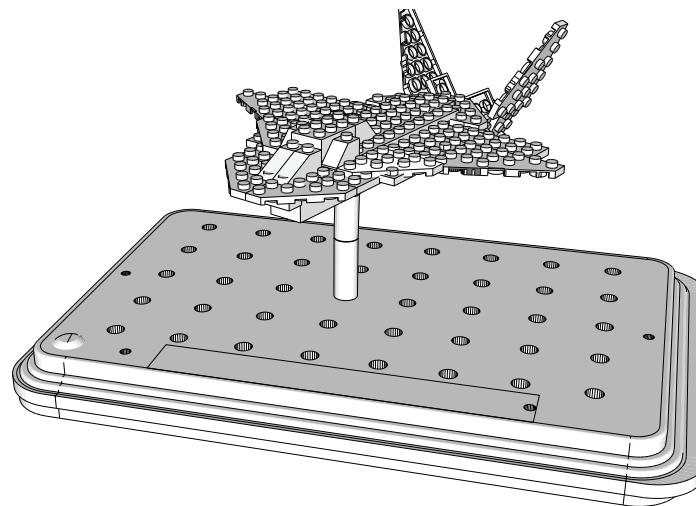

G

