




STEP
4

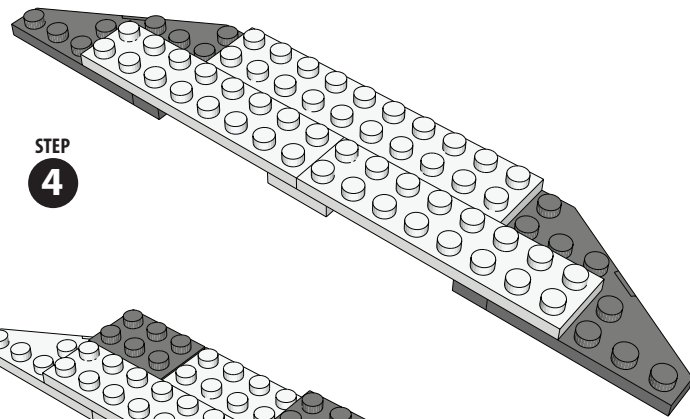


STEP
5

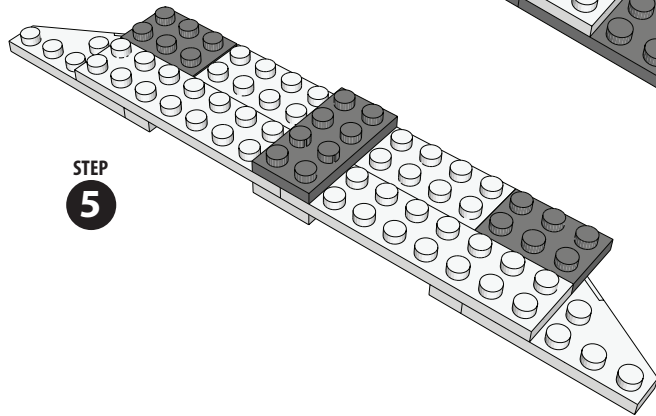


B

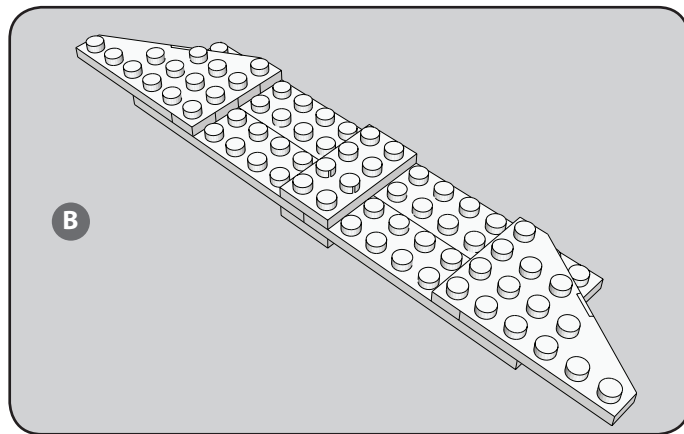

STEP
6

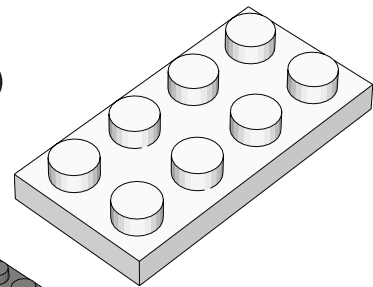


STEP
7

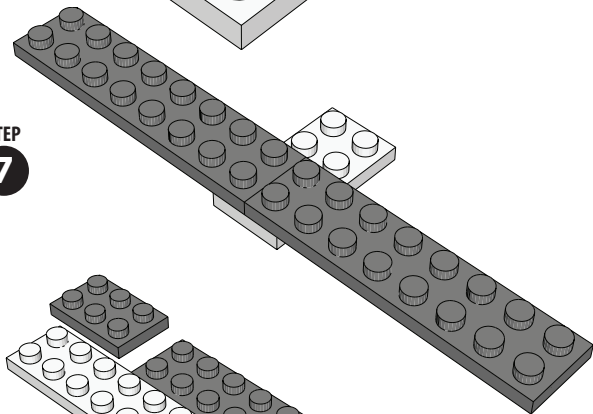


STEP
8


STEP
9

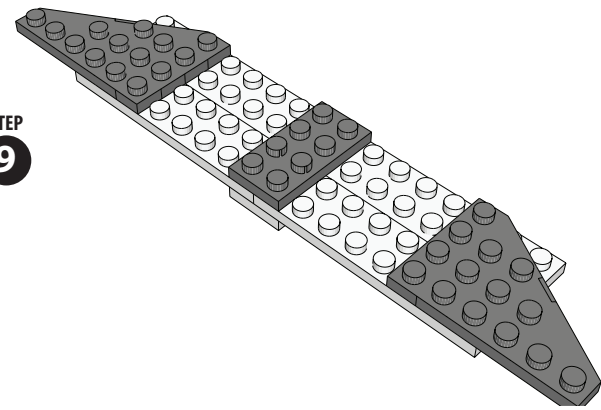


C

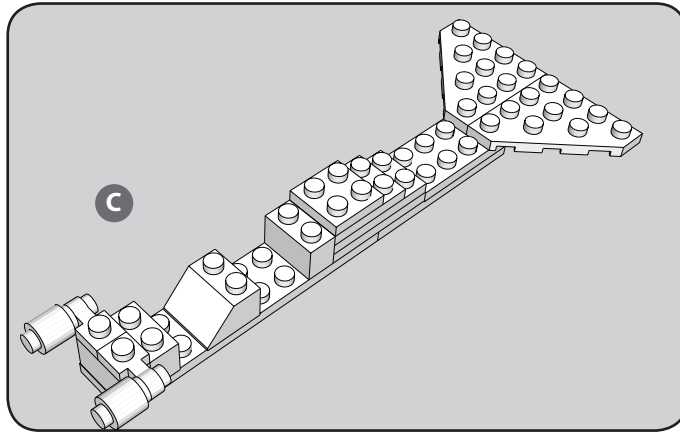


STEP
10

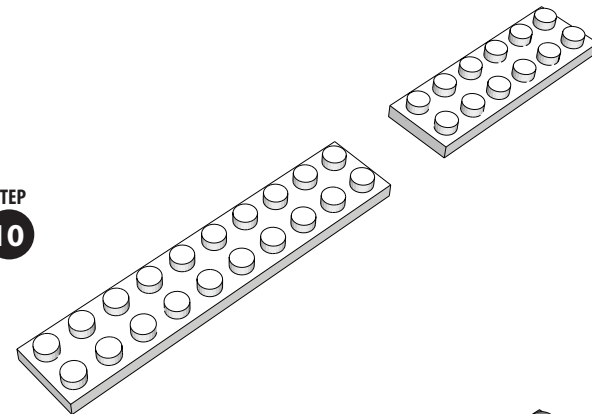


STEP
11

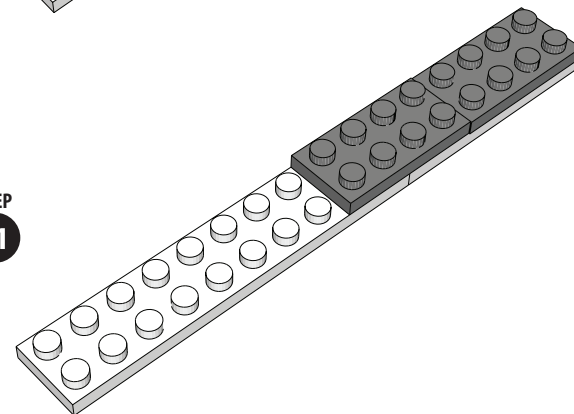


STEP
12

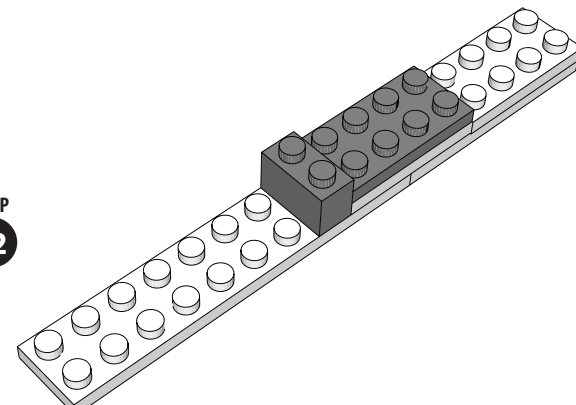


STEP
13

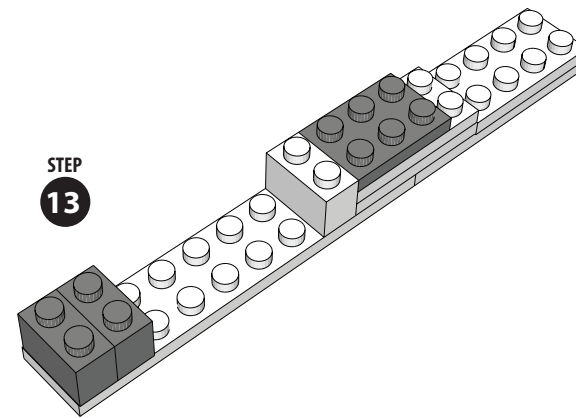


STEP
14

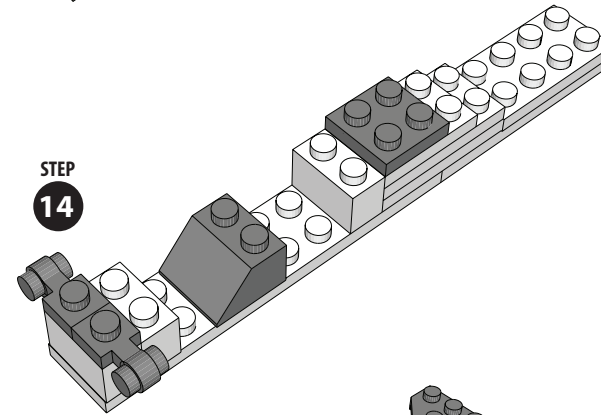


STEP
15

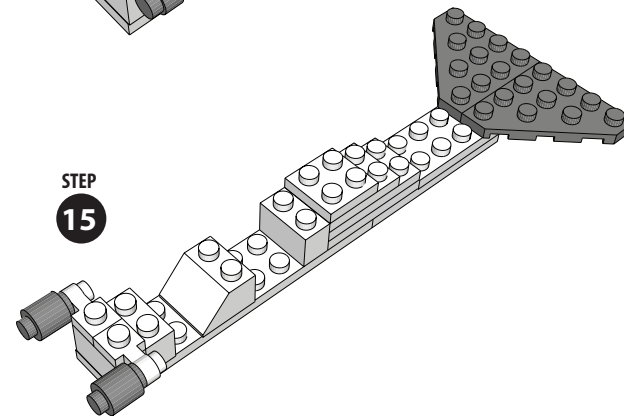


D

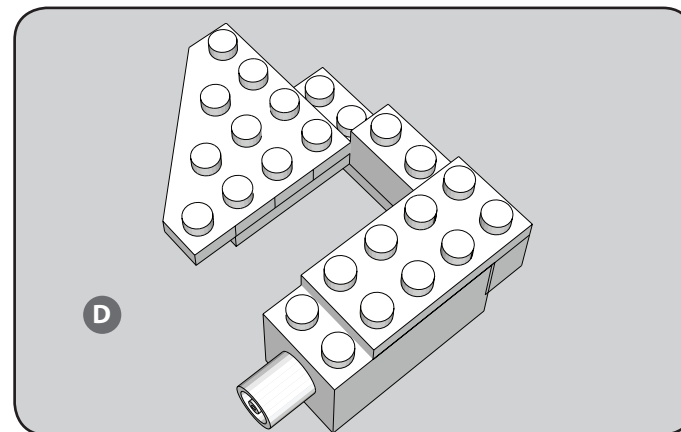


STEP
16

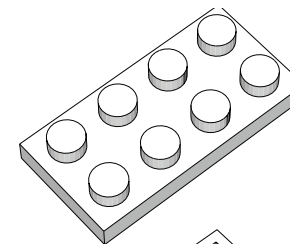


STEP
17

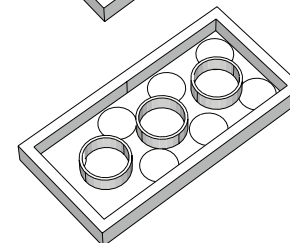


STEP
18

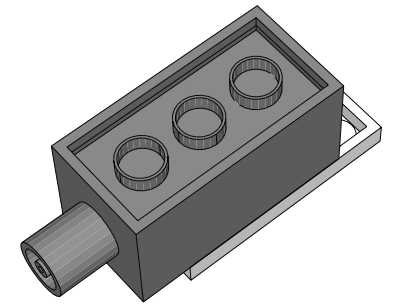


STEP
19

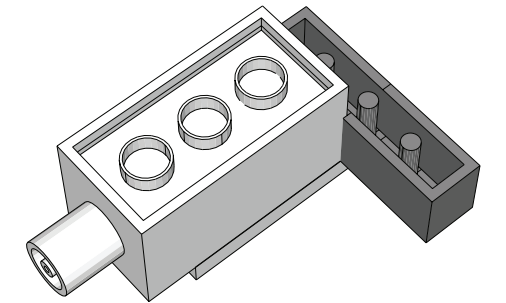


STEP
20









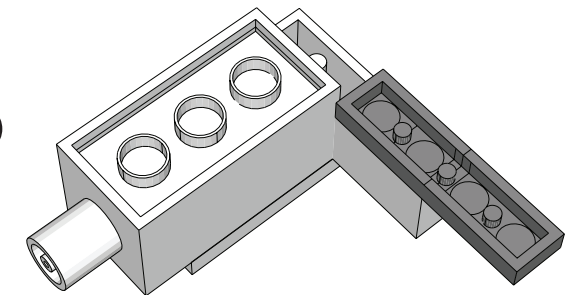


STEP
21

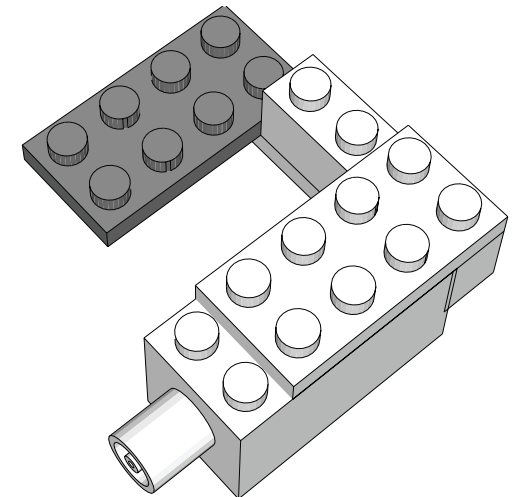

STEP
22

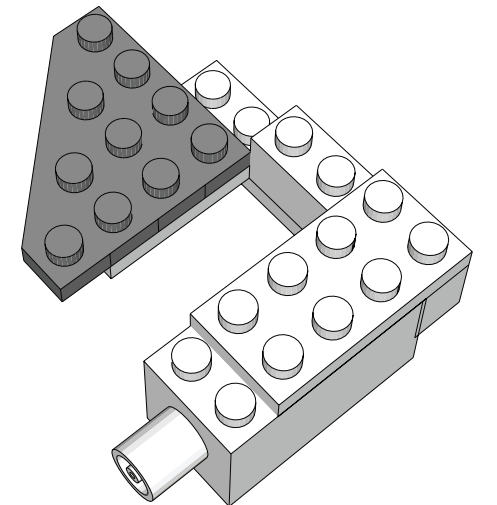

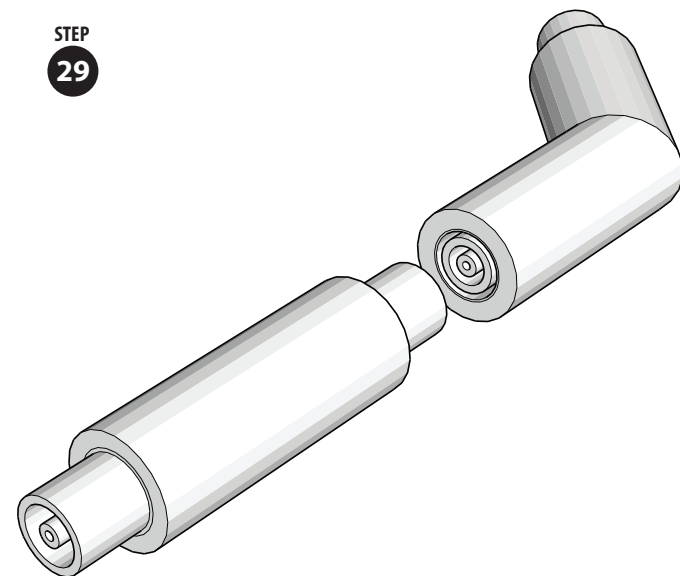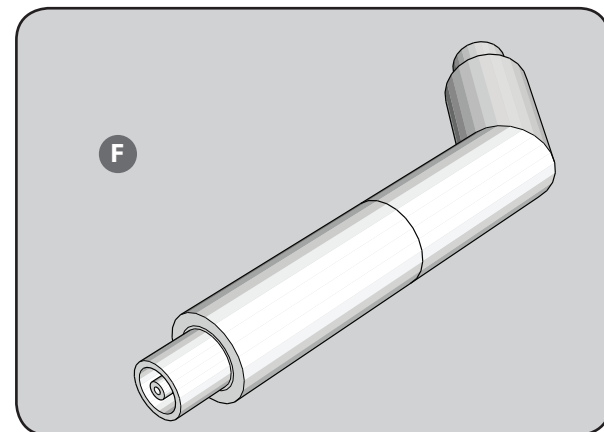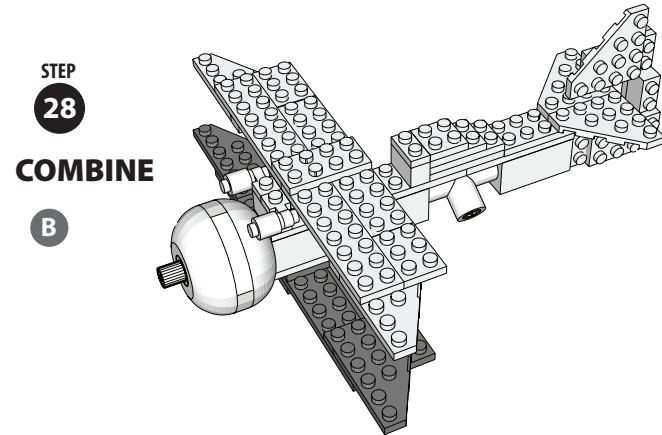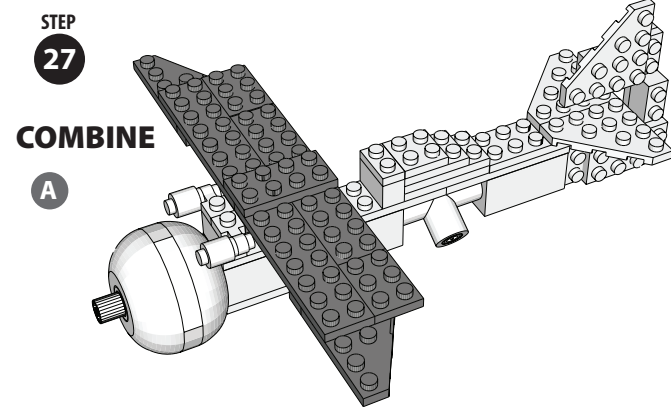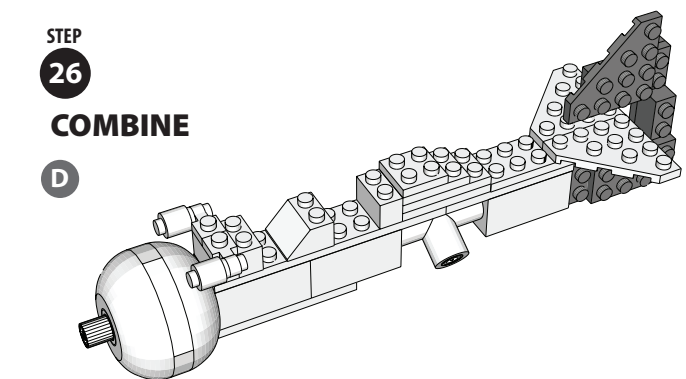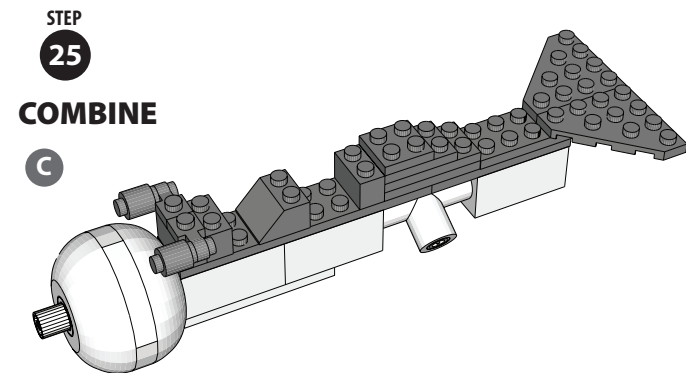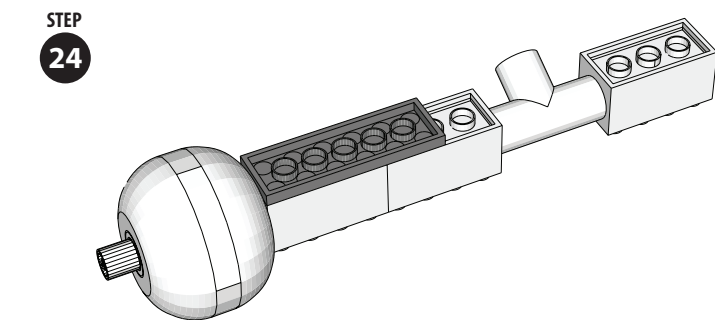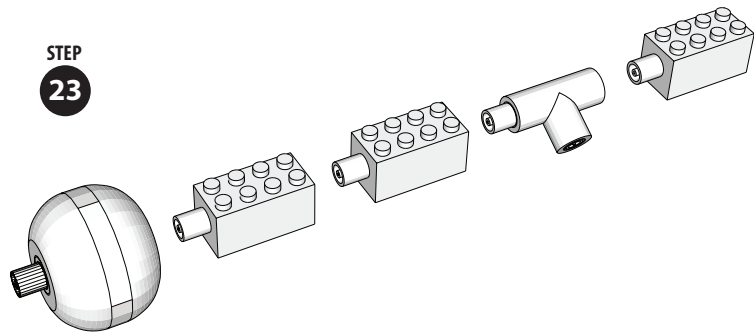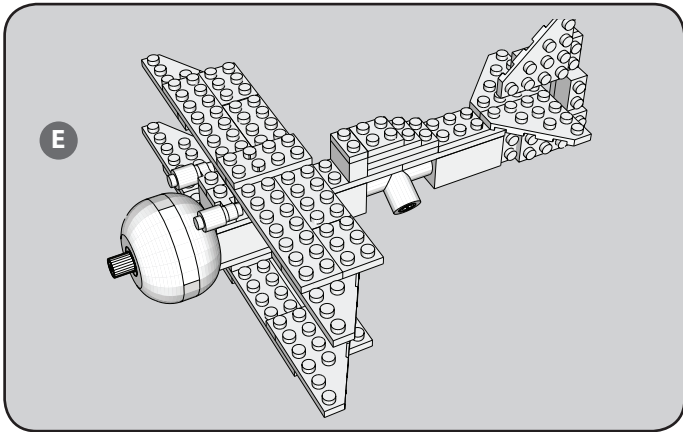

AFFIX MODEL TO 3D LITE BOARD

