

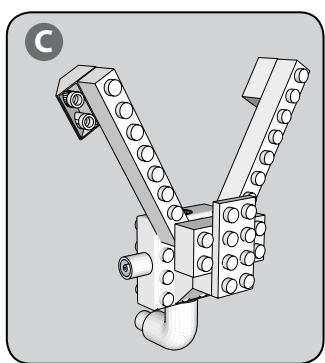



STEP
9
COMBINE
B

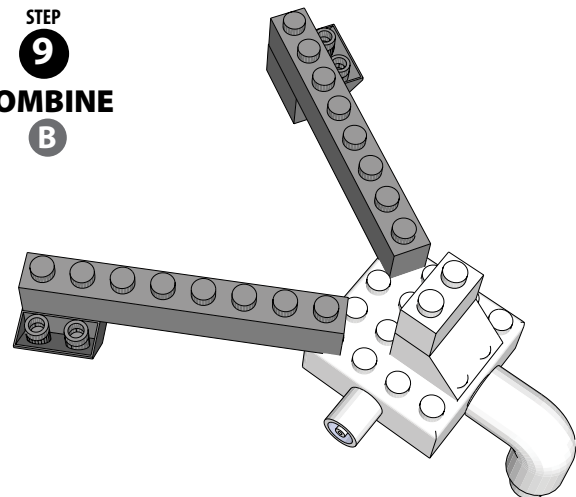


STEP
10

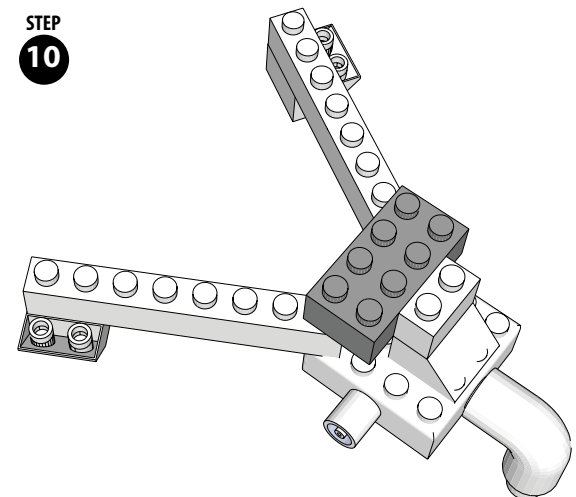


STEP
11

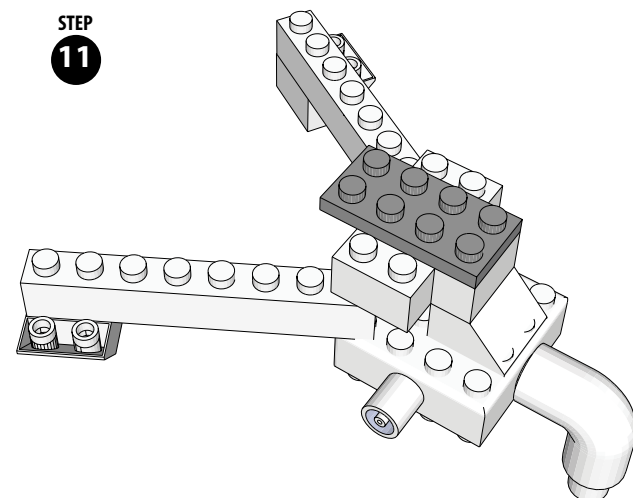


STEP
12

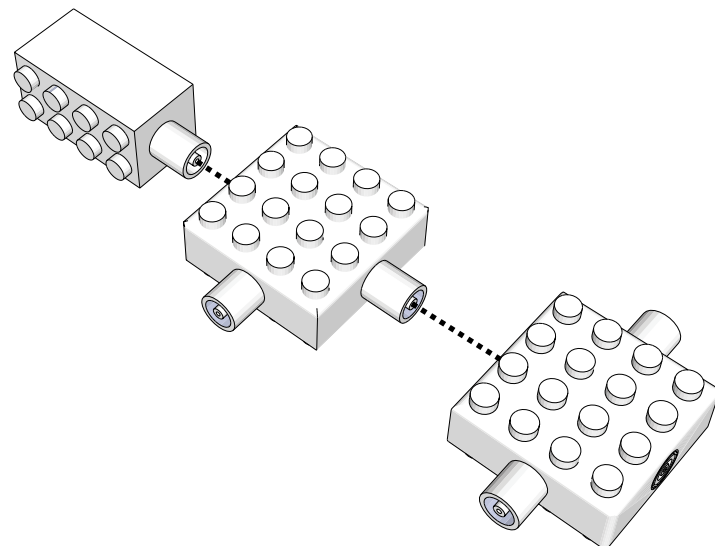


STEP
13

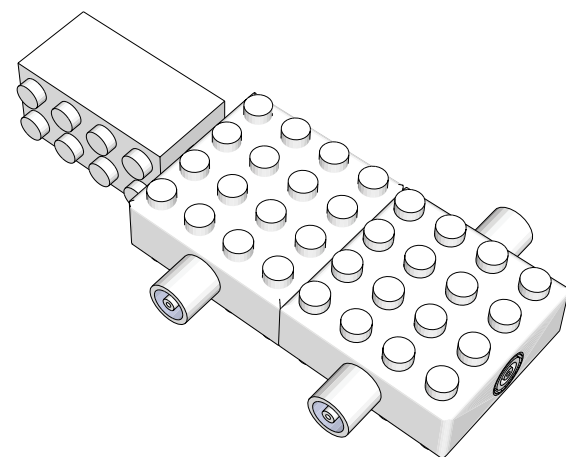


STEP
14

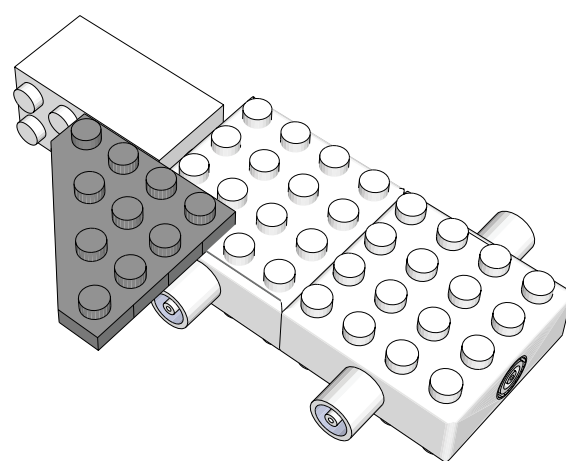


STEP
15

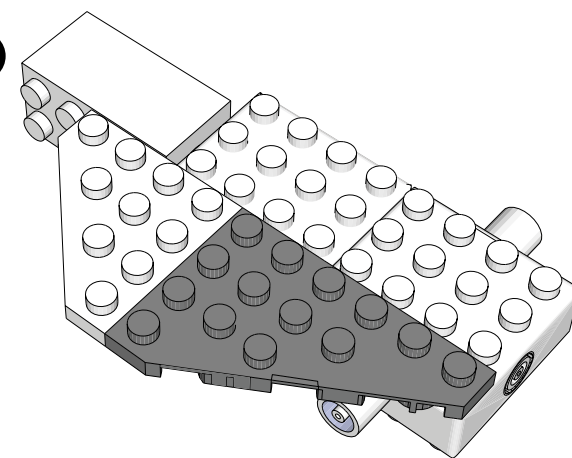


STEP
16

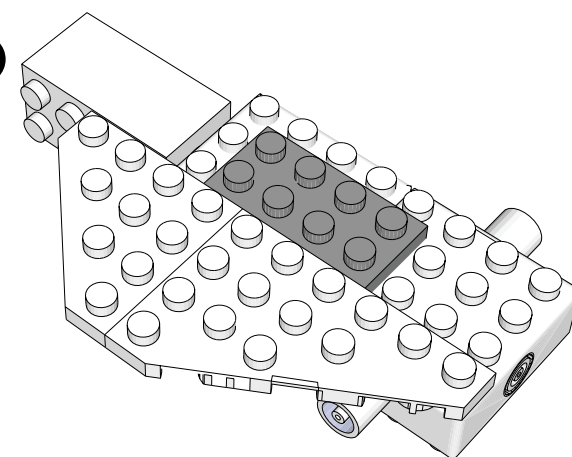


STEP
17

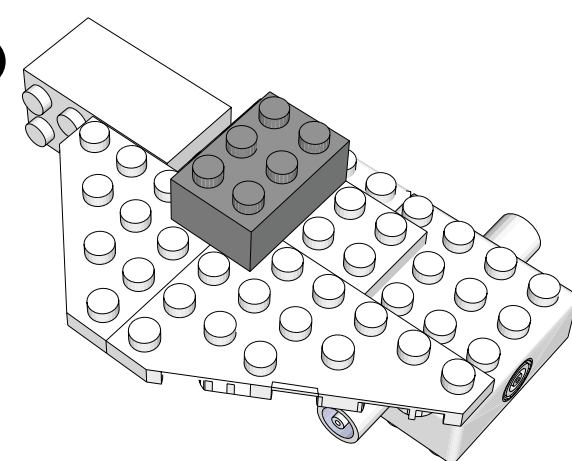


STEP
18

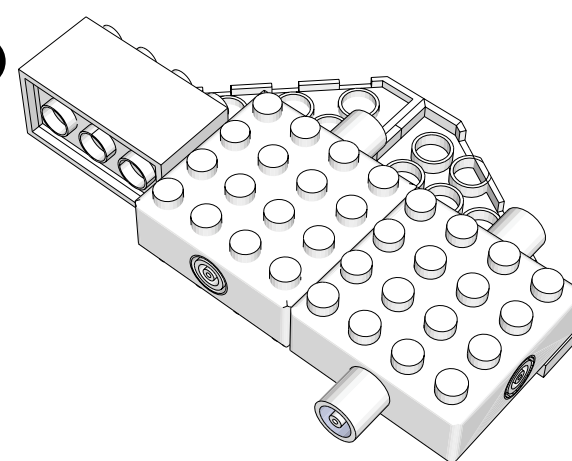


STEP
19

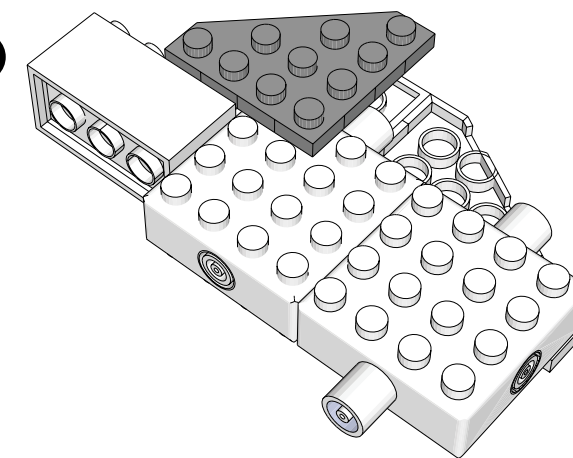


STEP
20

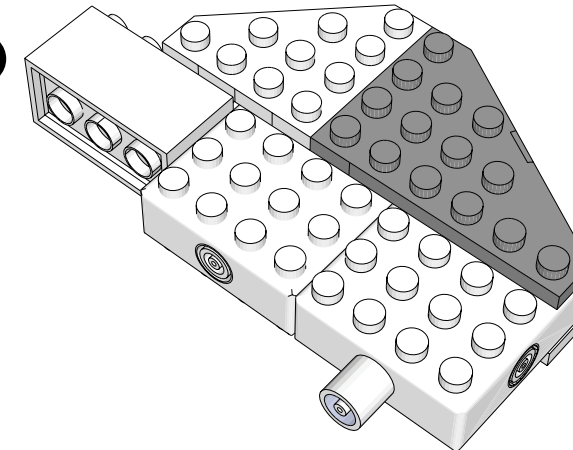


STEP
21

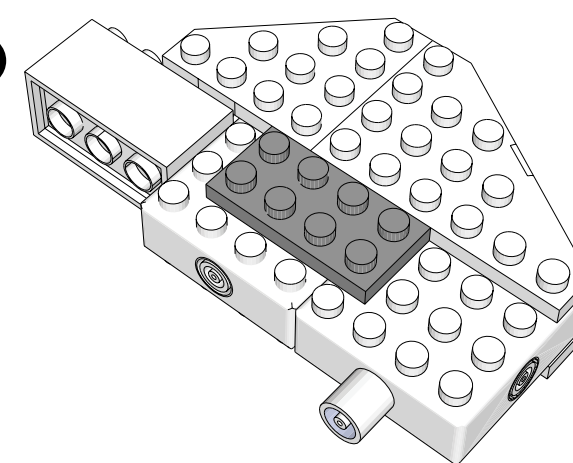


STEP
22

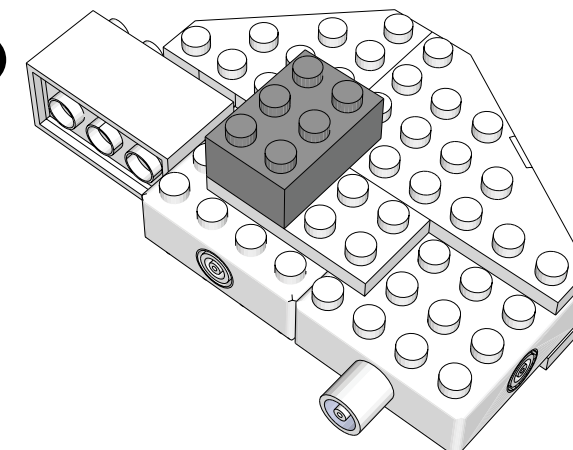

STEP
23 COMBINE C D

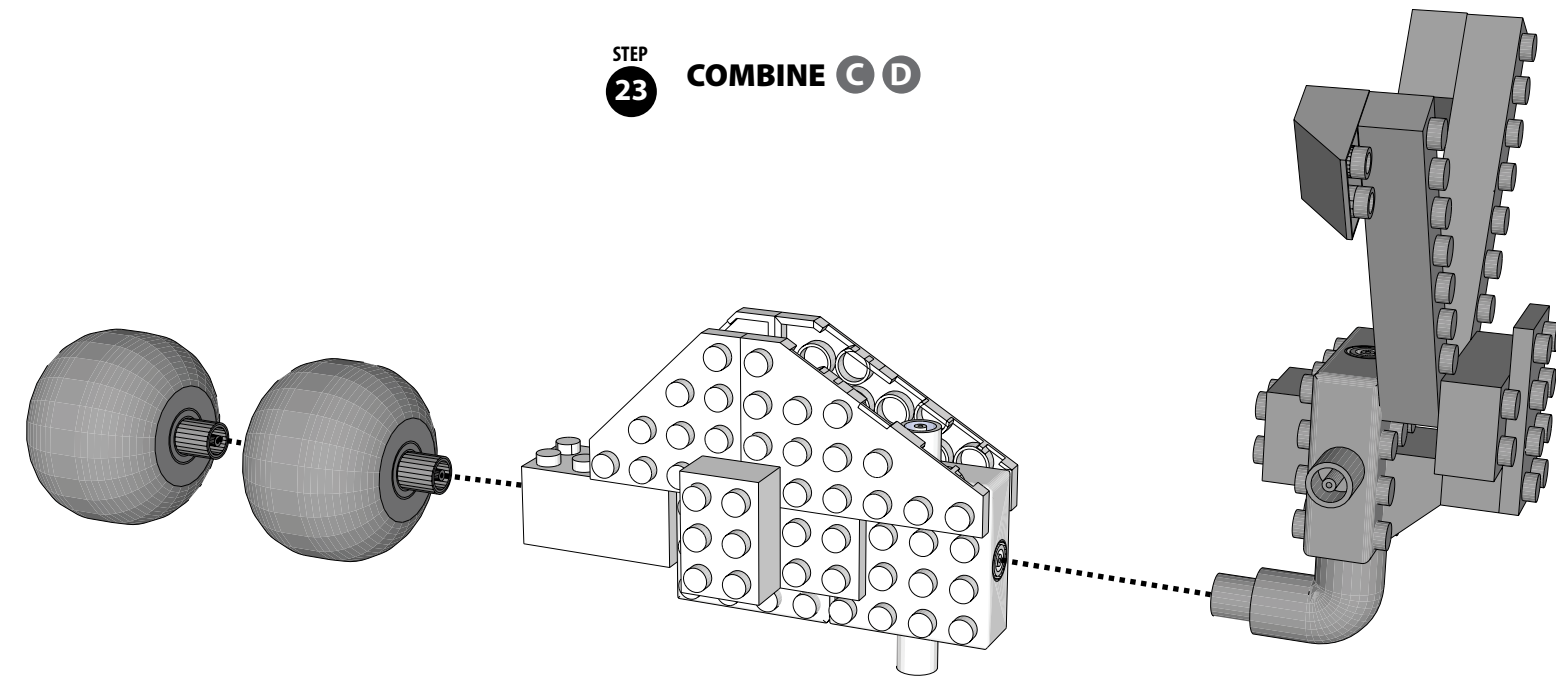

STEP
24

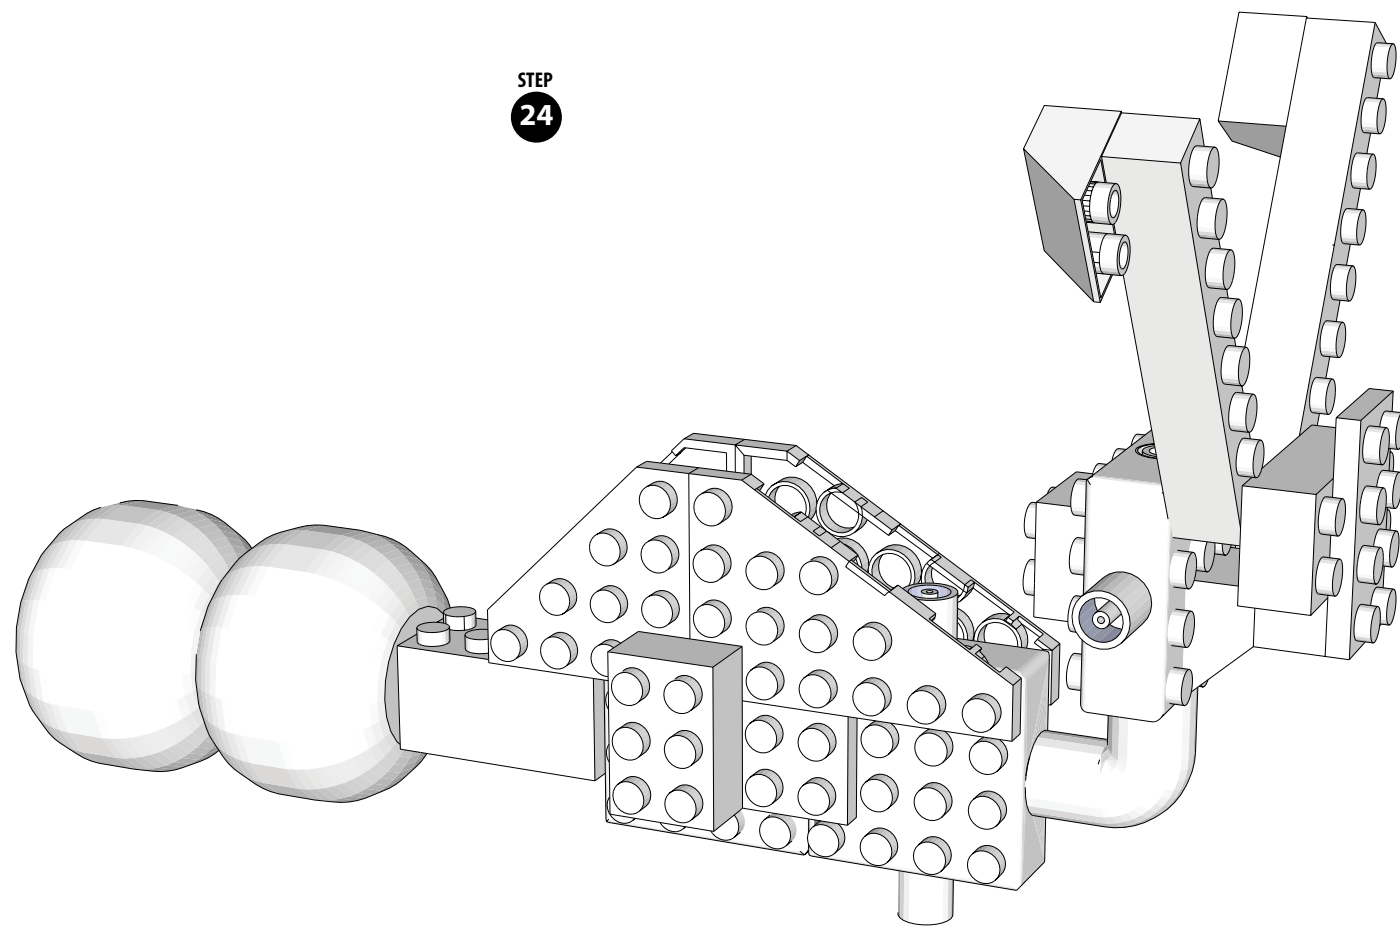

ATTACH MODEL TO THE TRIANGLE POWER BASE

STEP
25

