




STEP
7

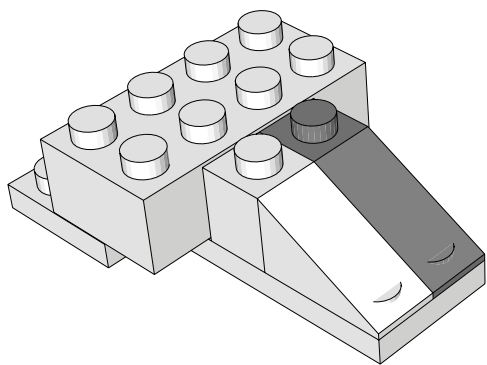


STEP
8

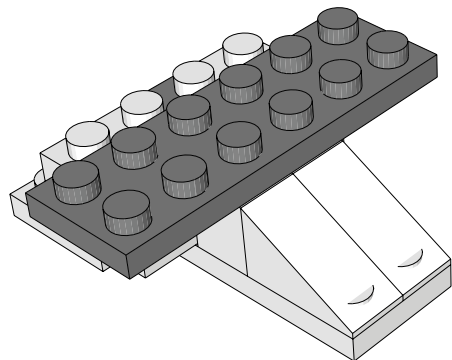


STEP
9

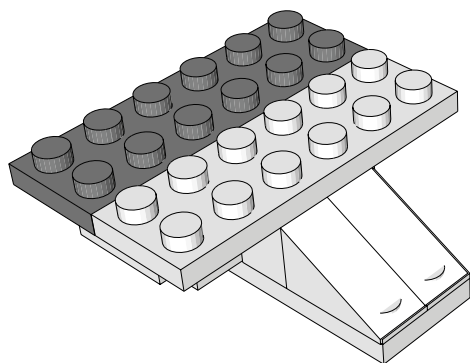


STEP
10

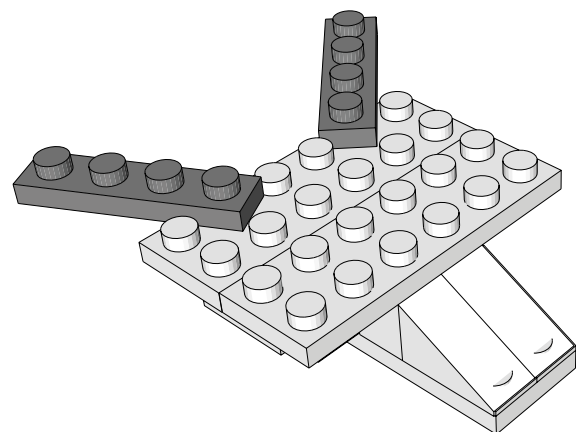


STEP
11

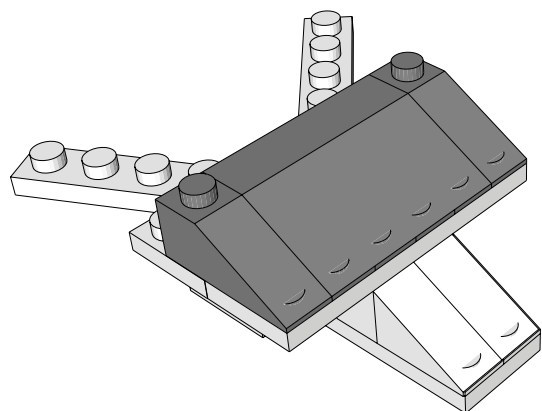



STEP
12

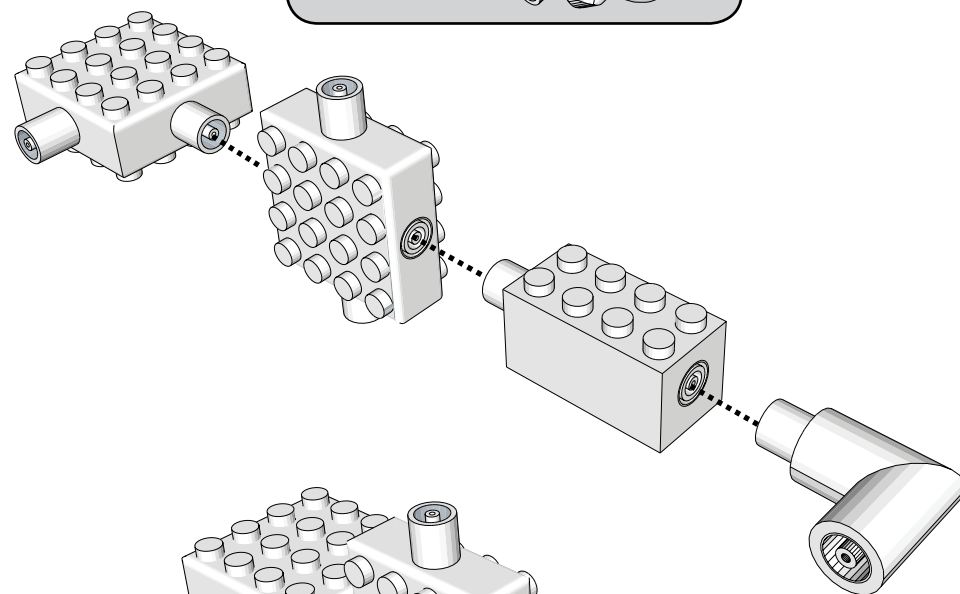


STEP
13

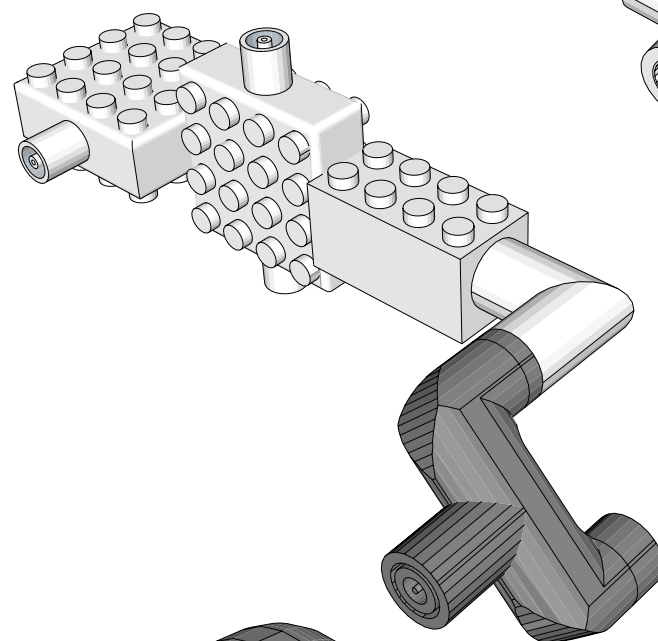


STEP
14

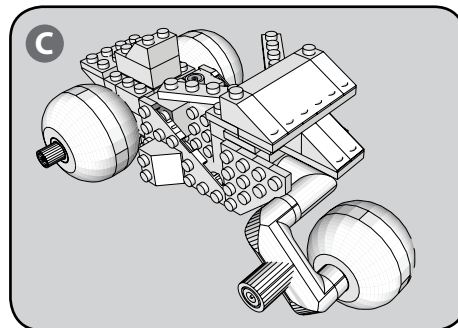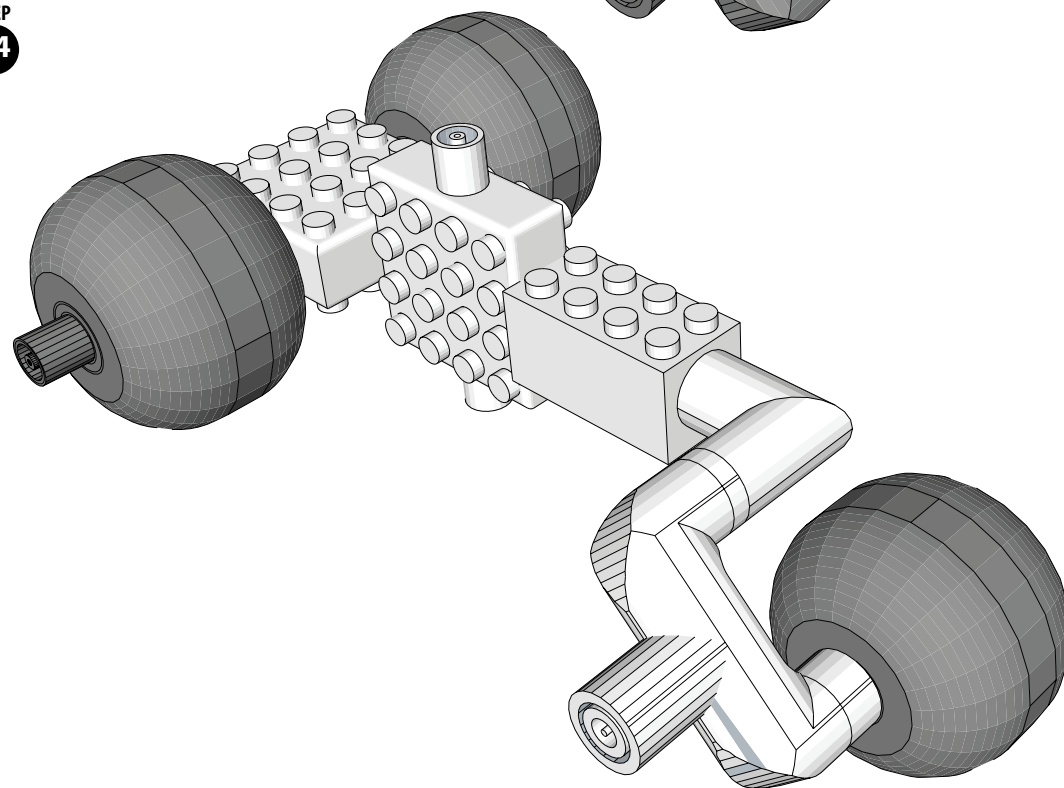


STEP
15

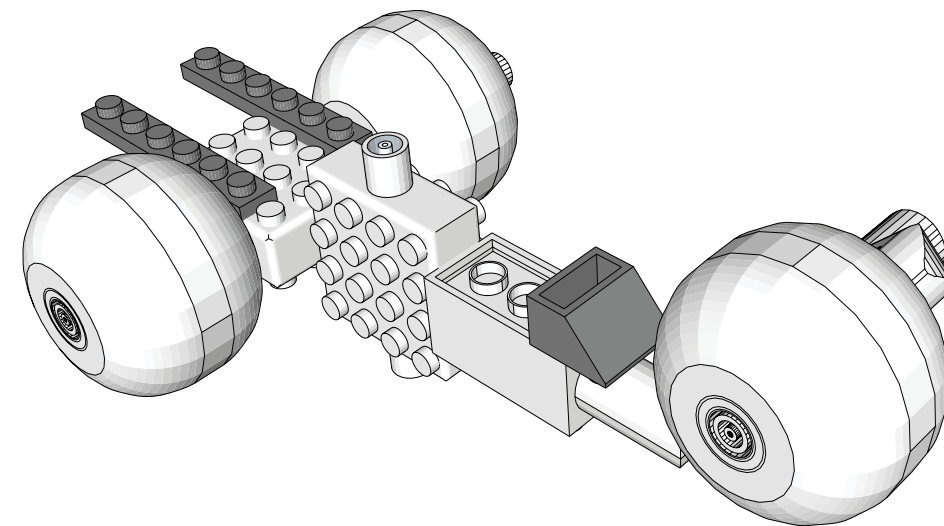

STEP
16

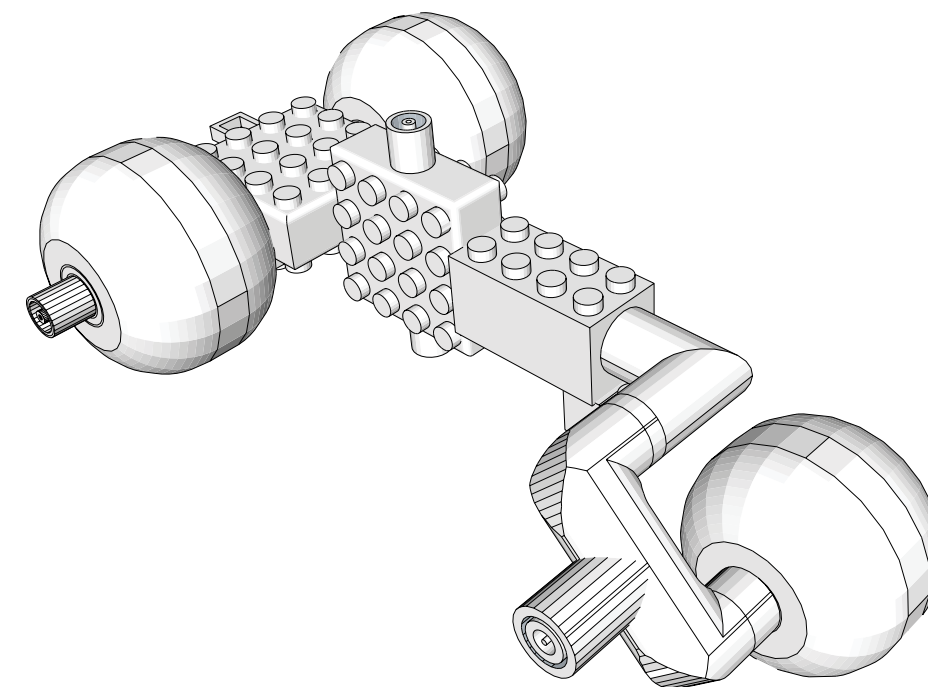


STEP
17

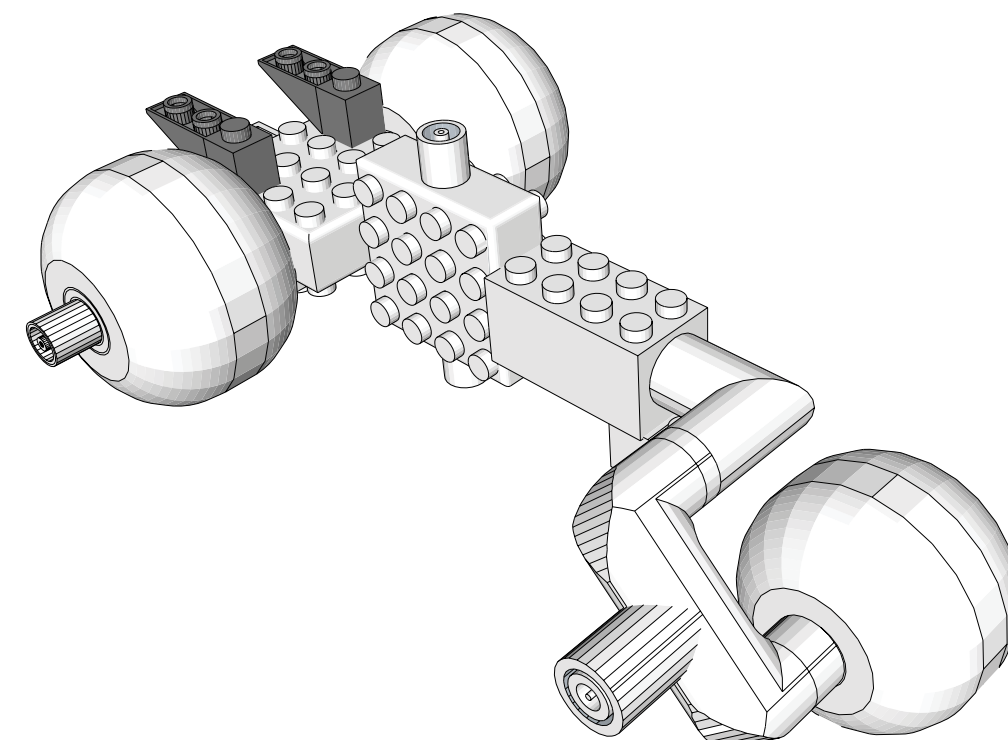

STEP 19


STEP
20

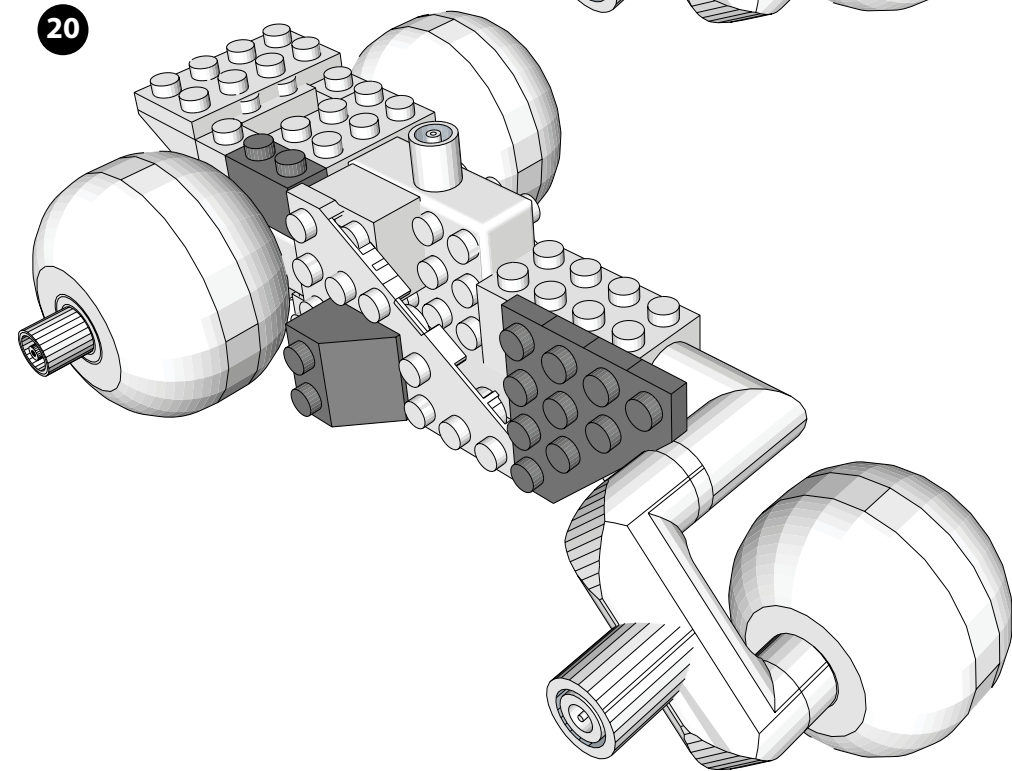

STEP
21

STEP
22

STEP
23

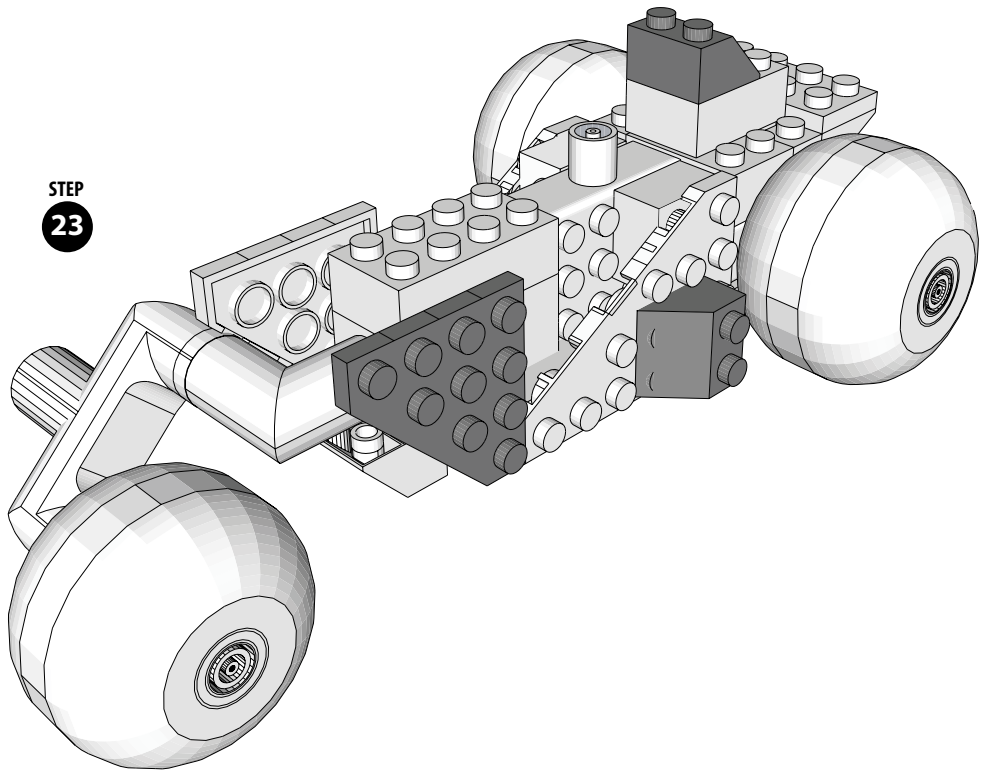

STEP
24

24 **COMBINE** **B**

STEP
25

ATTACH MODEL TO THE TRIANGLE POWER BASE WITH THE PEG CORD

