

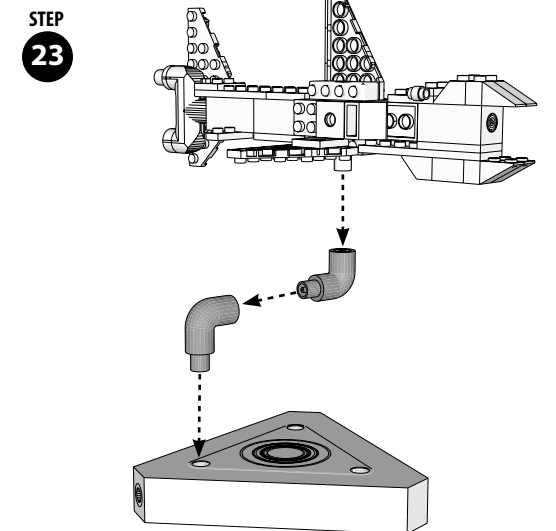
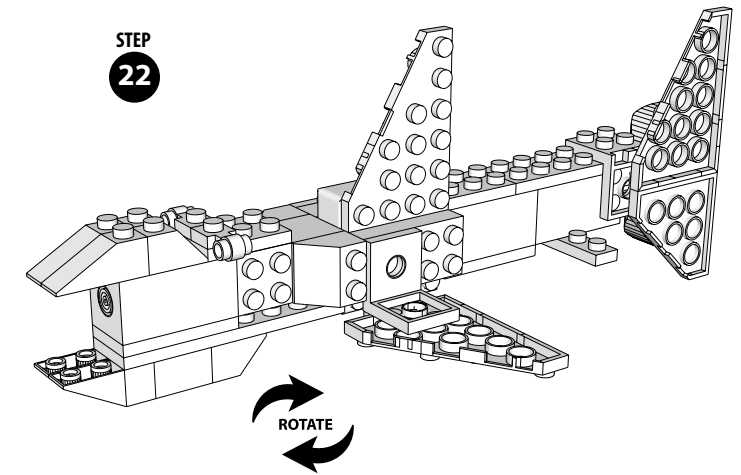
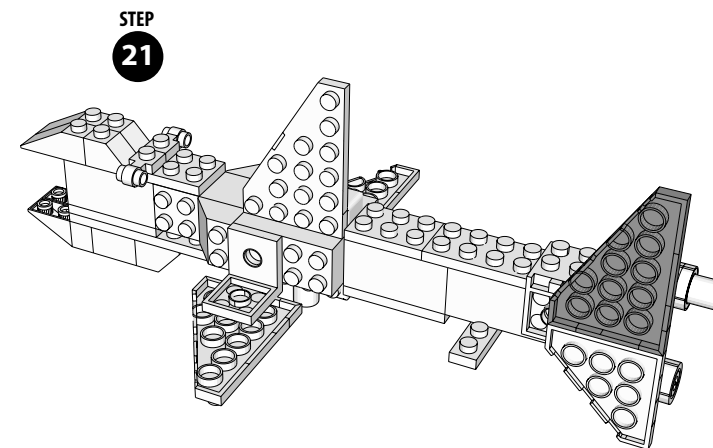
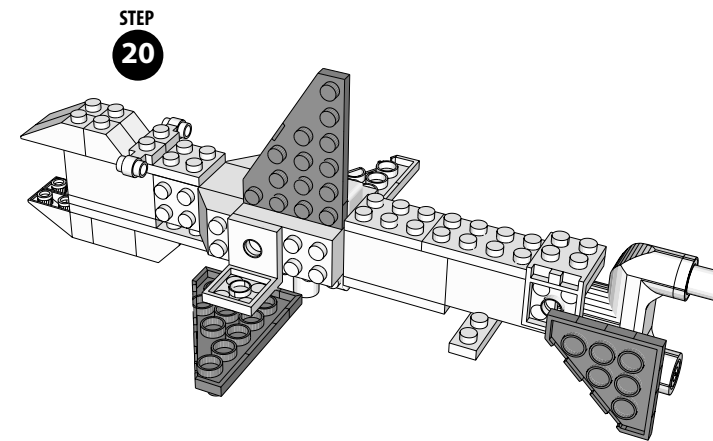
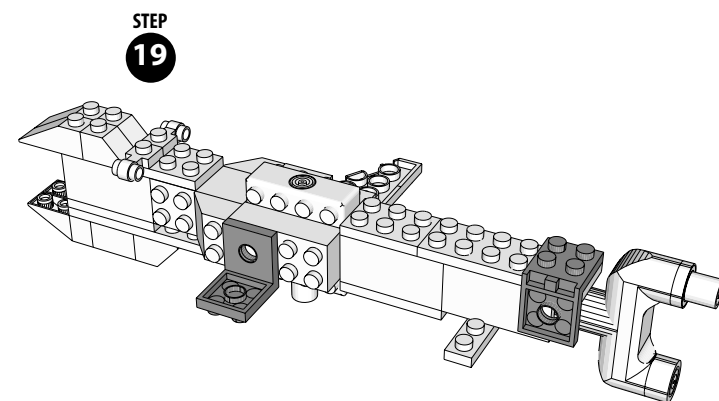
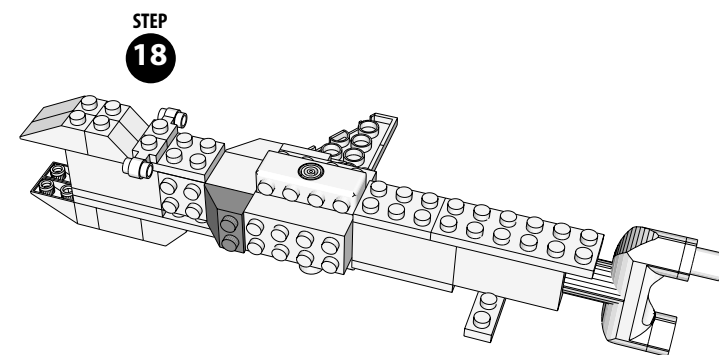
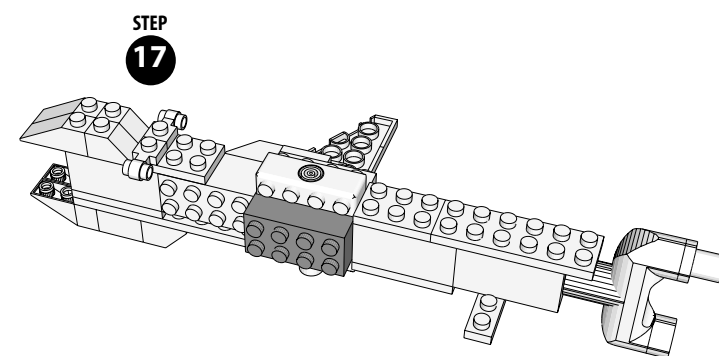
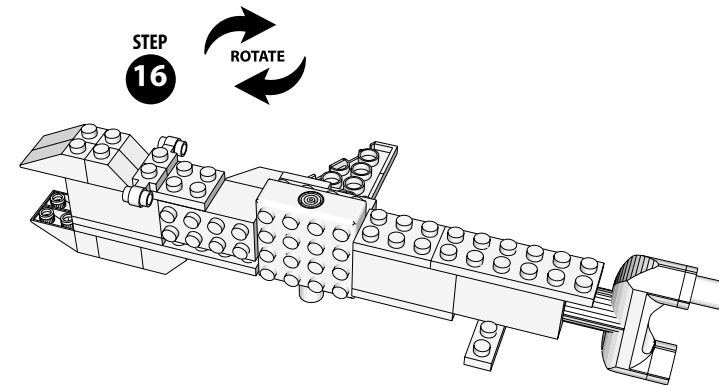
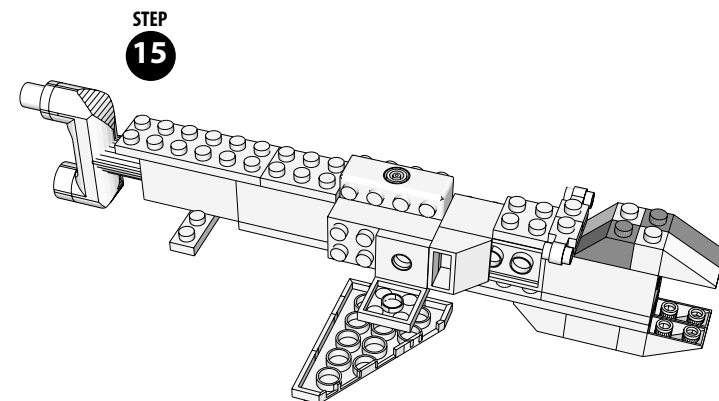
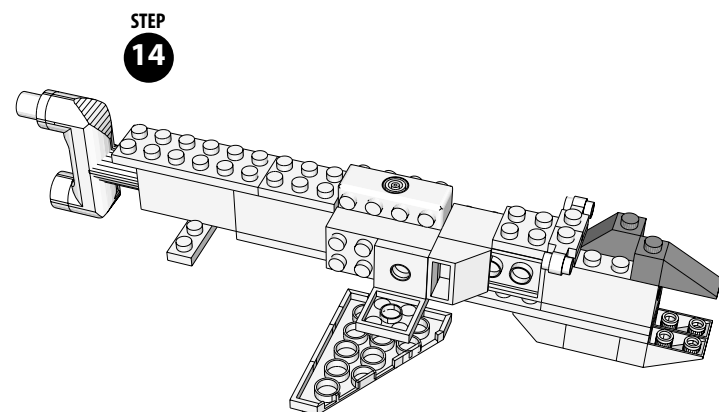
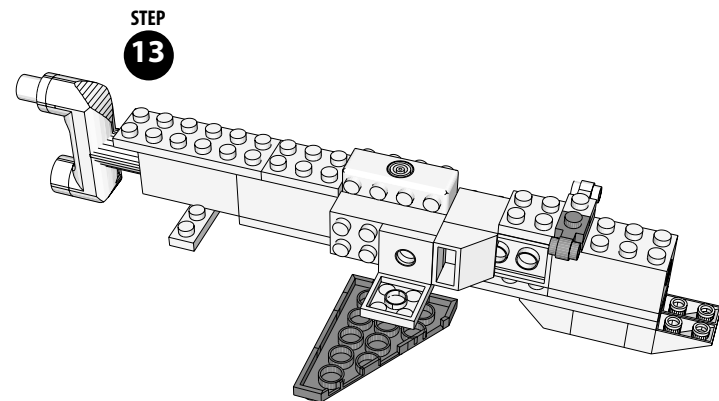
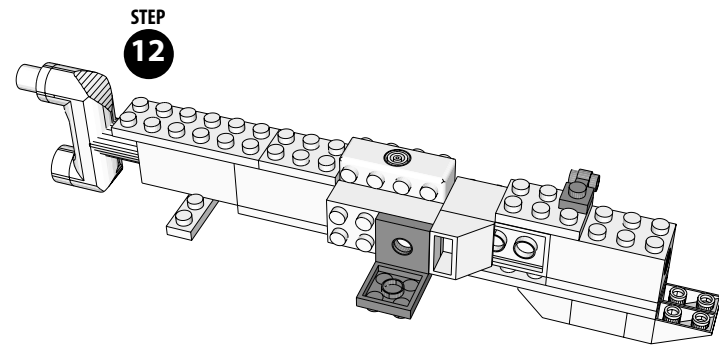


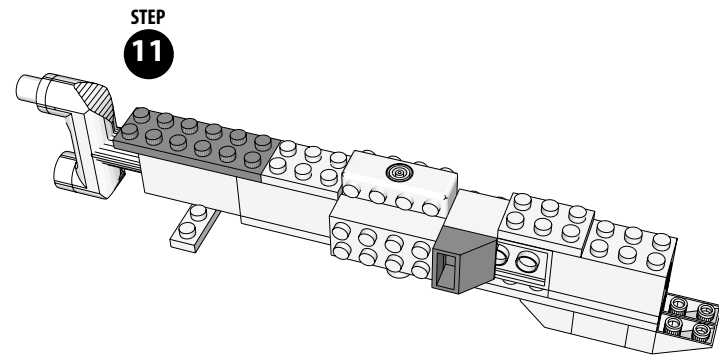

ATTACH THE MODEL TO THE TRIANGLE POWER BASE

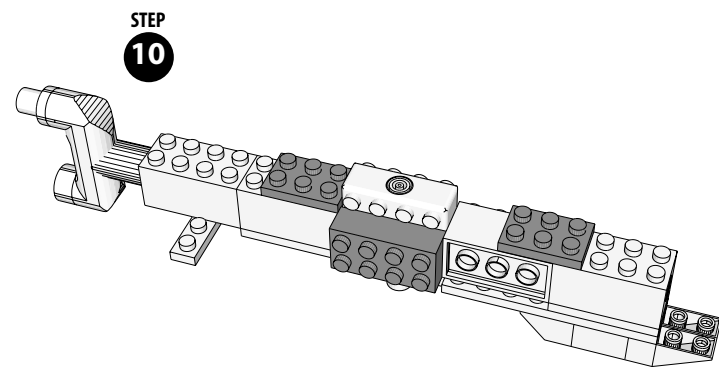