




STEP
10

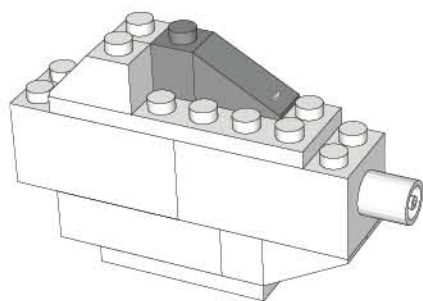

STEP
11

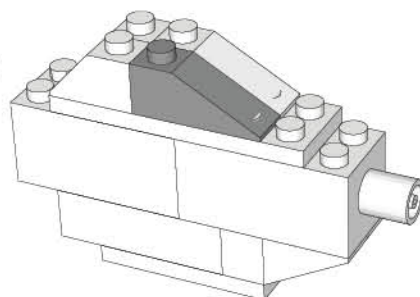


B




STEP
12




STEP
13

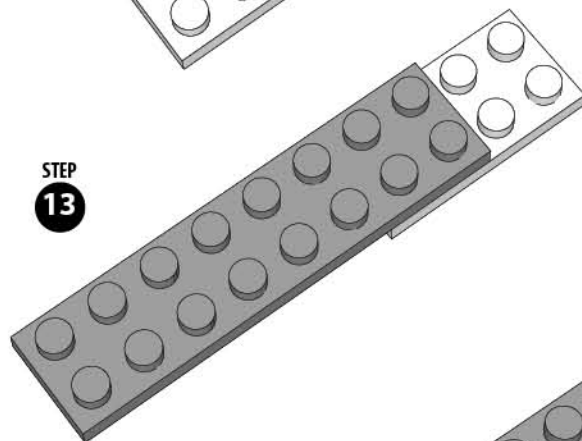

STEP
14

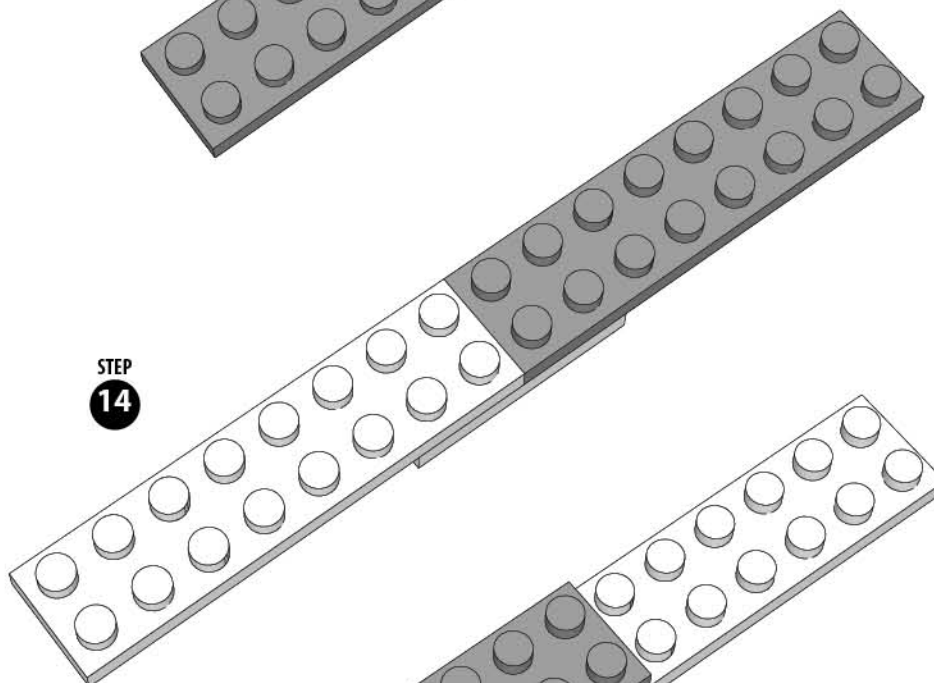

STEP
15

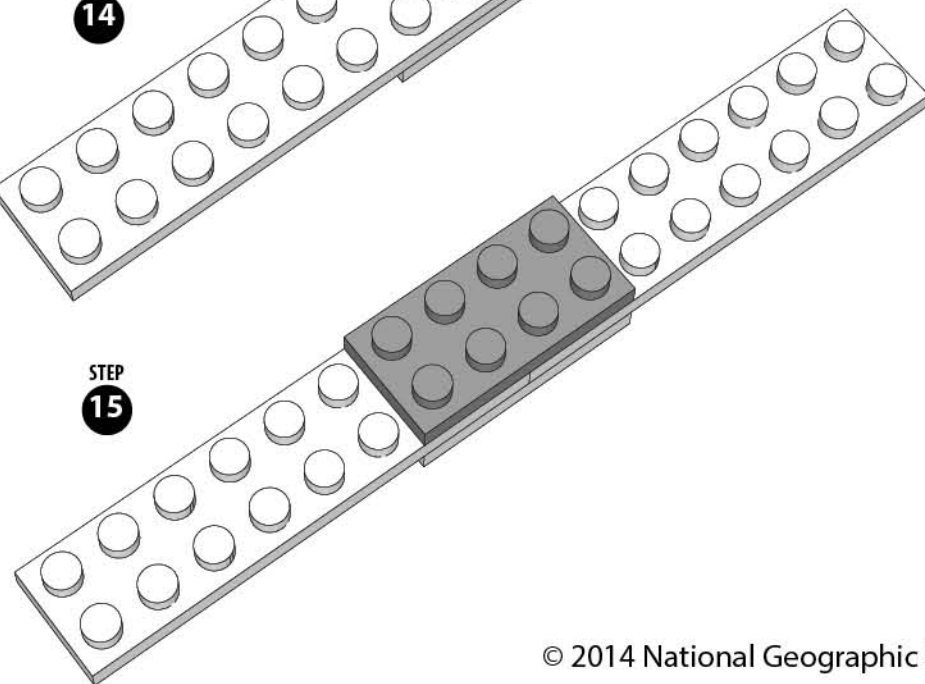


C




STEP
16




STEP
17

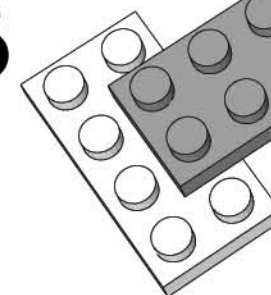


STEP
18

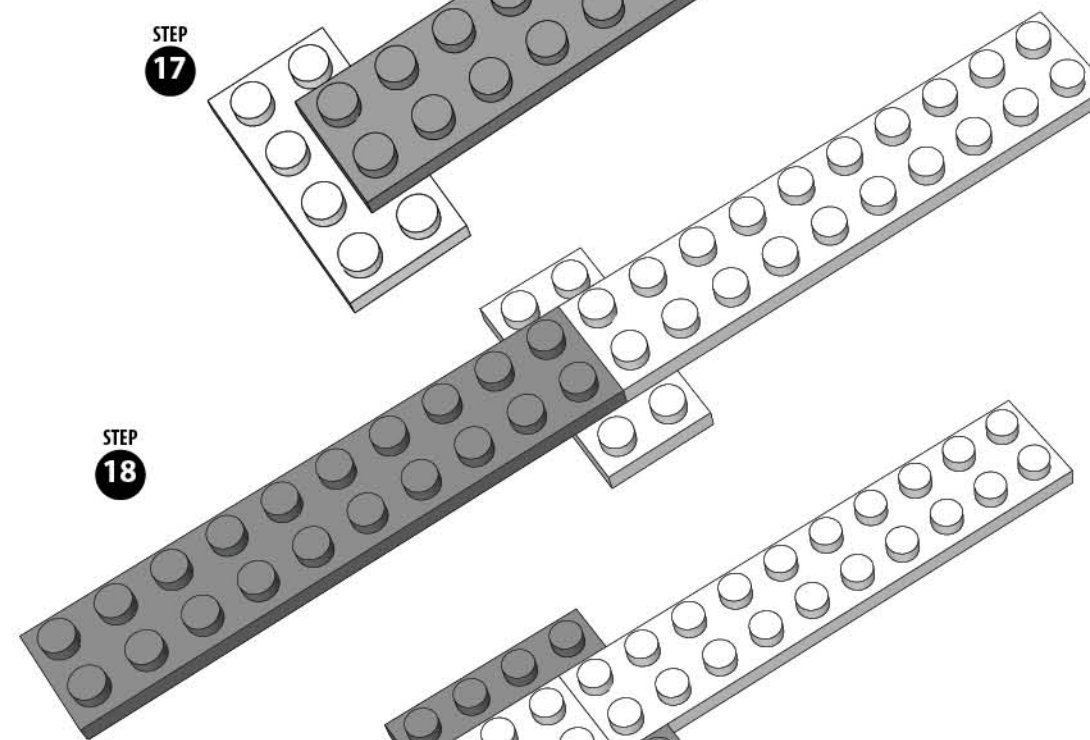


STEP
19

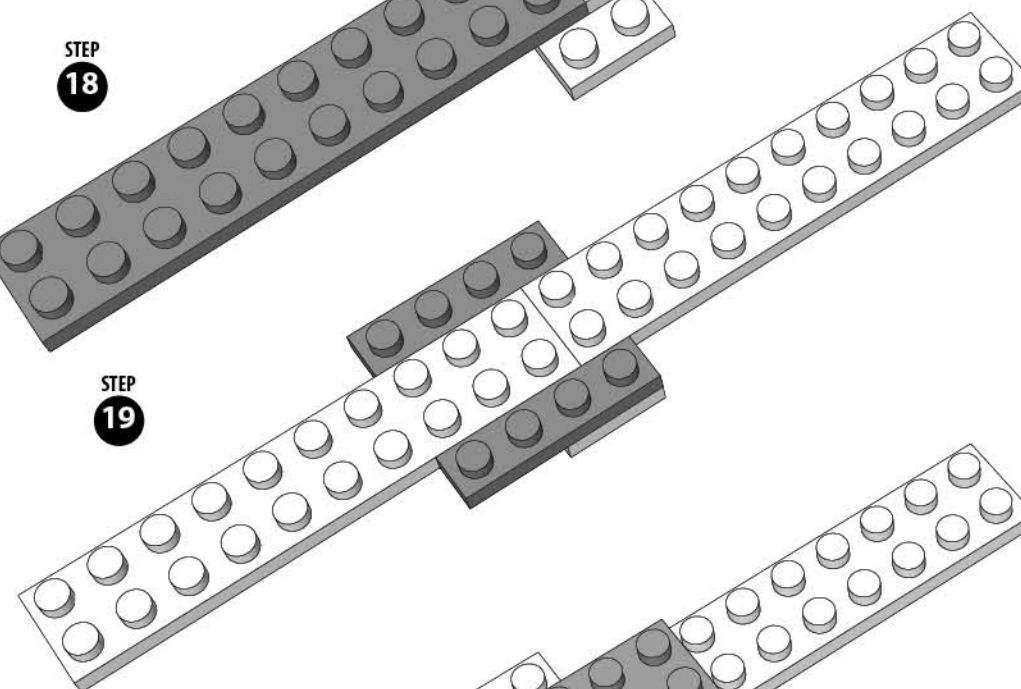


STEP
20

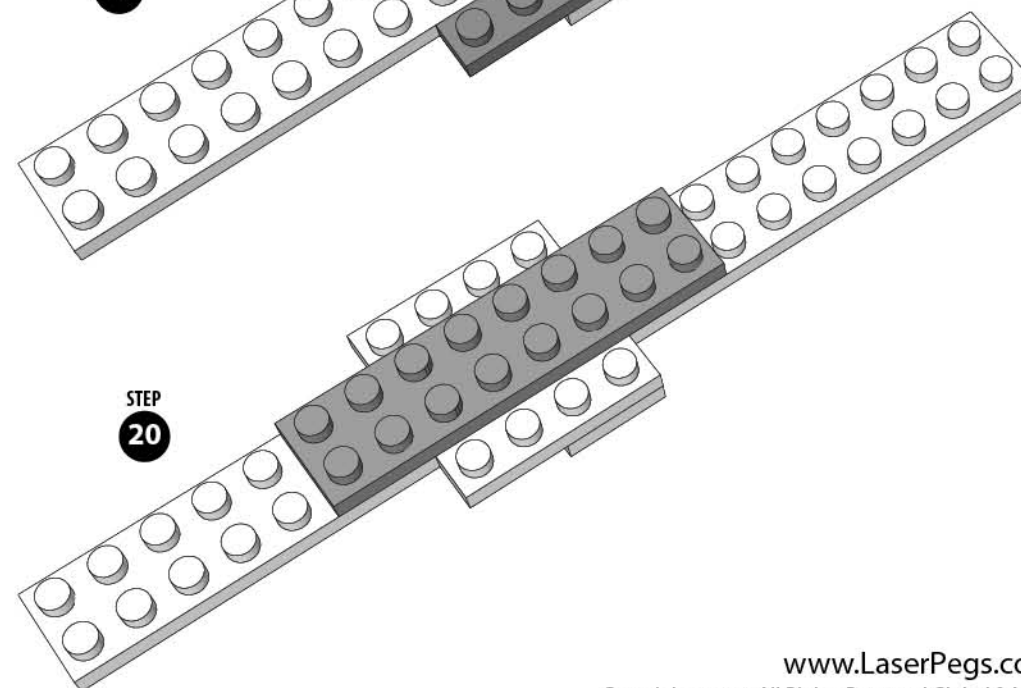


STEP
21

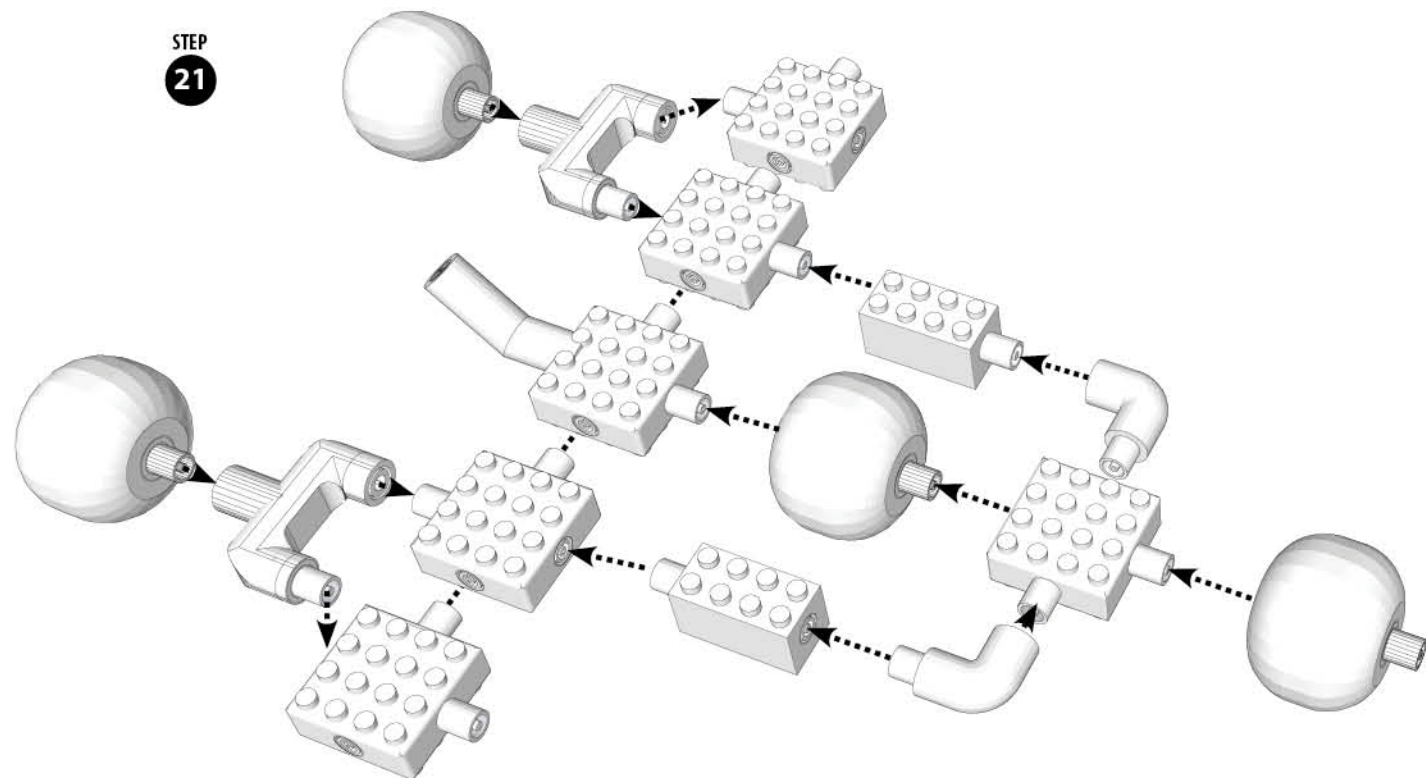


STEP
22

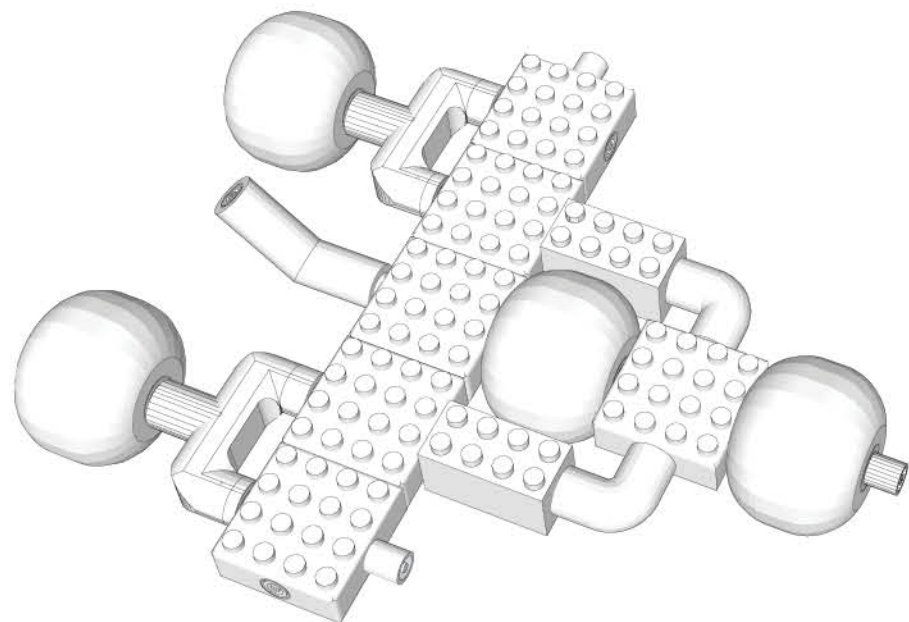


STEP
23

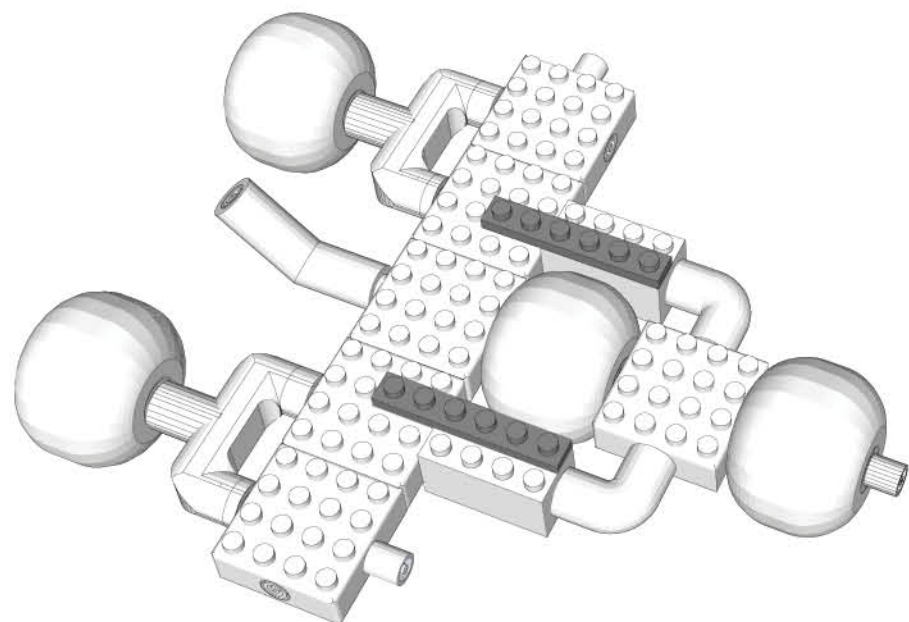


STEP
24

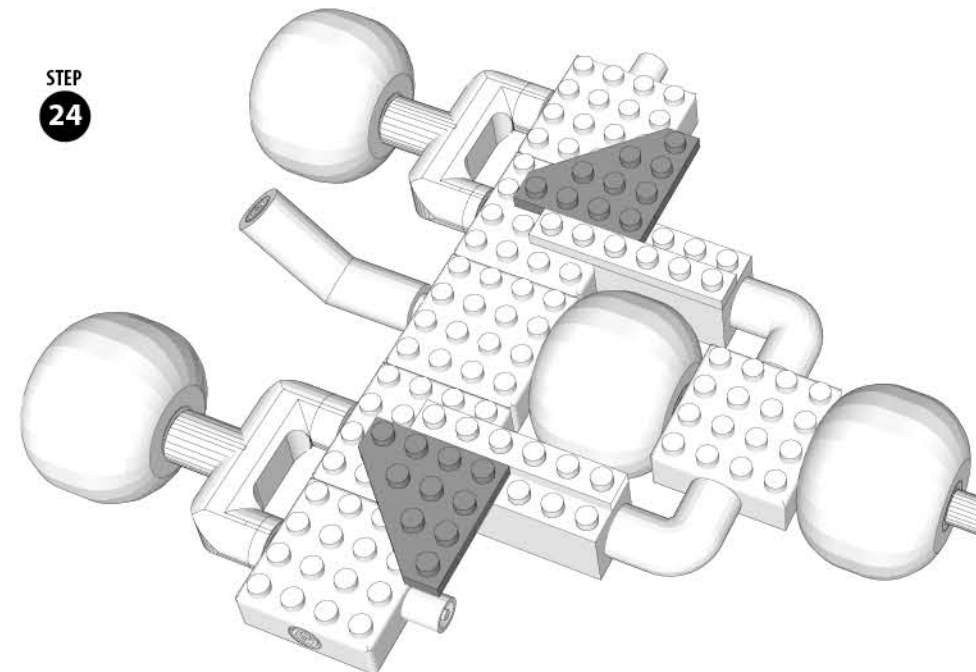


STEP
25

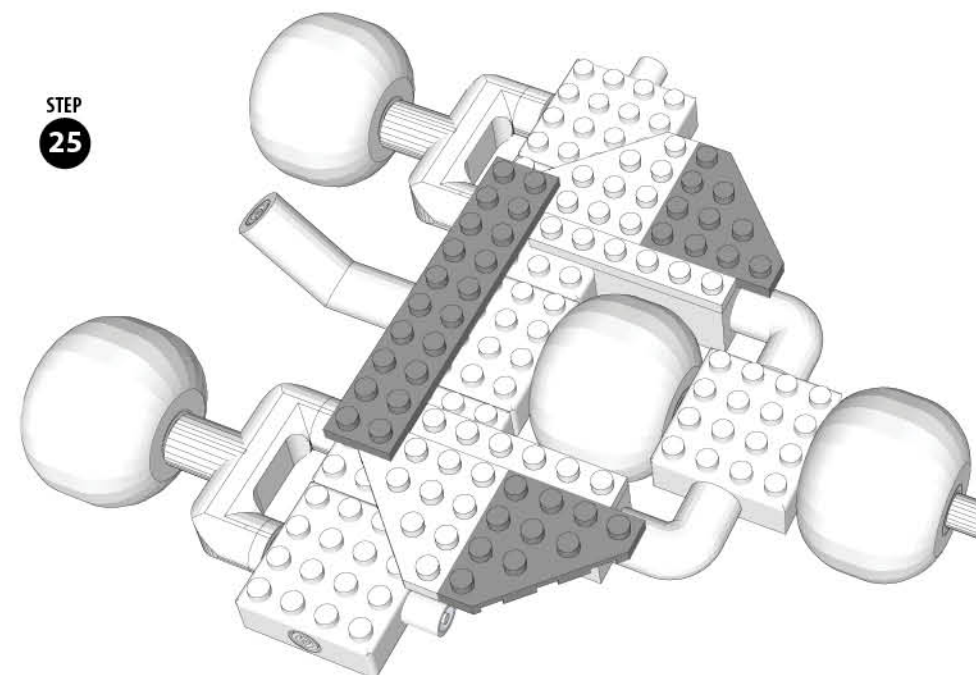


STEP
26

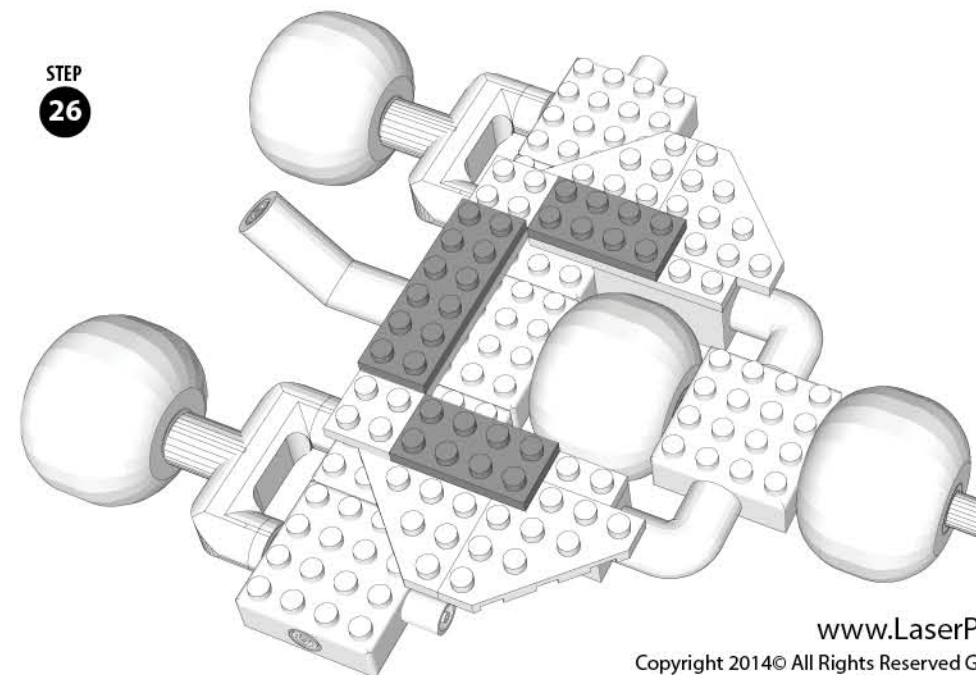


STEP
27

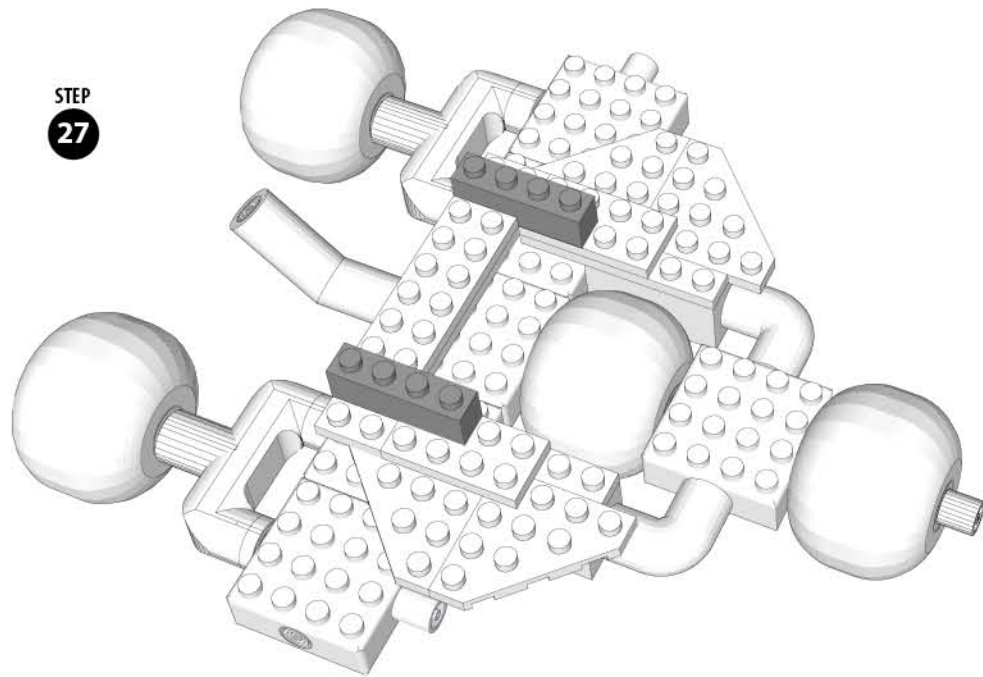


STEP
28

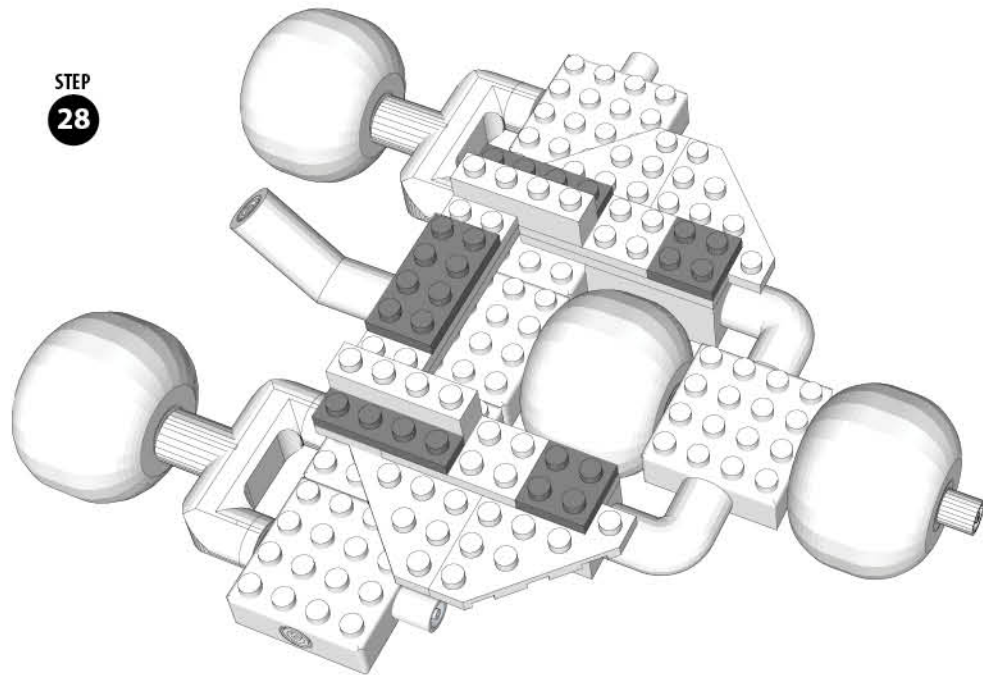


STEP
29

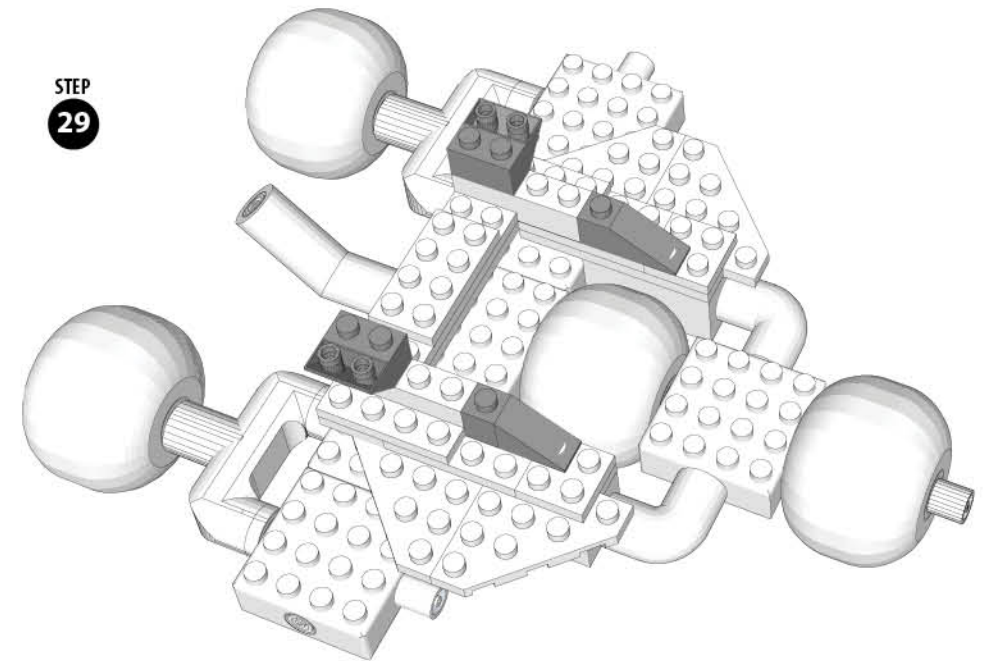


STEP
30

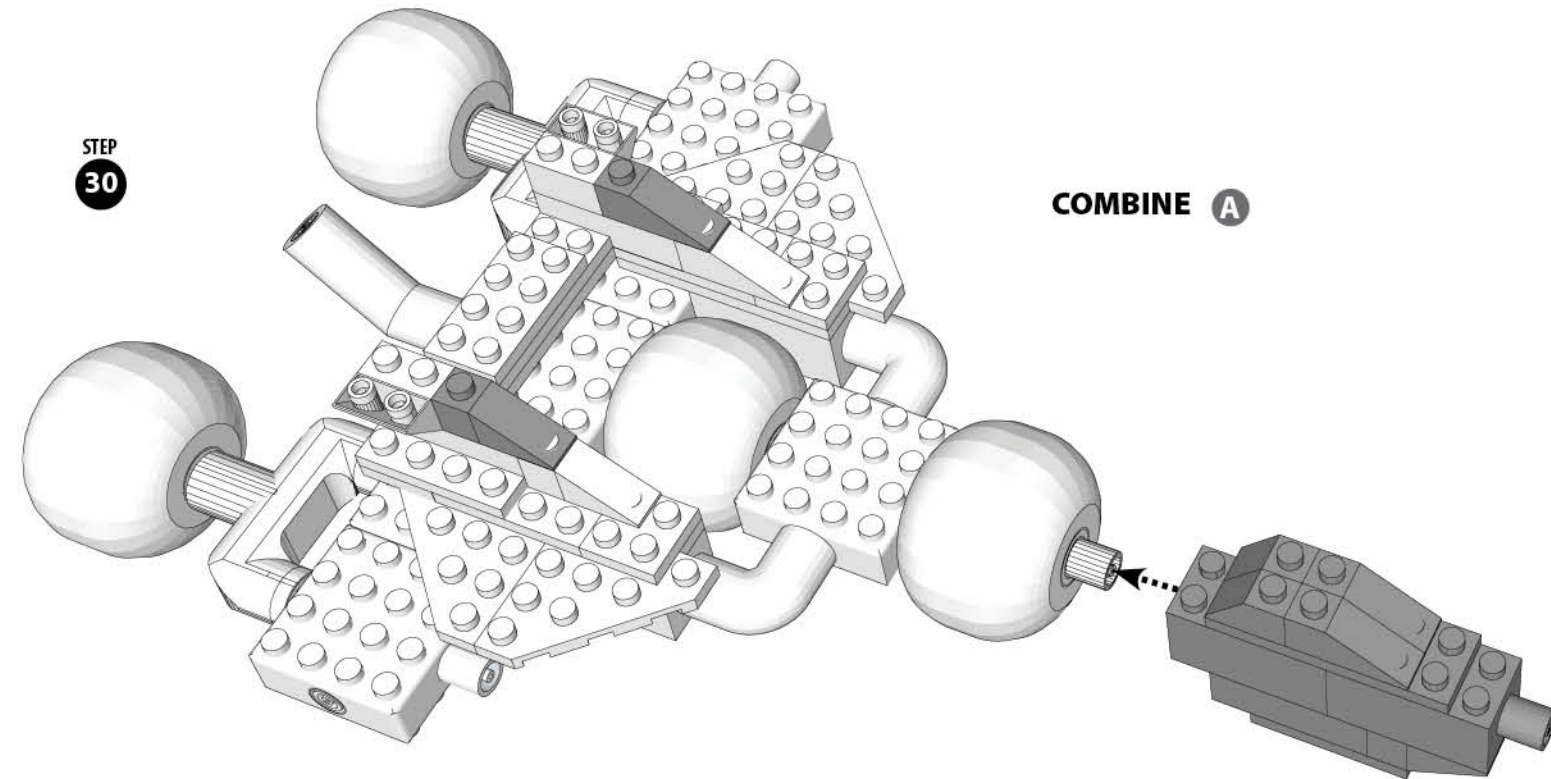


STEP
31

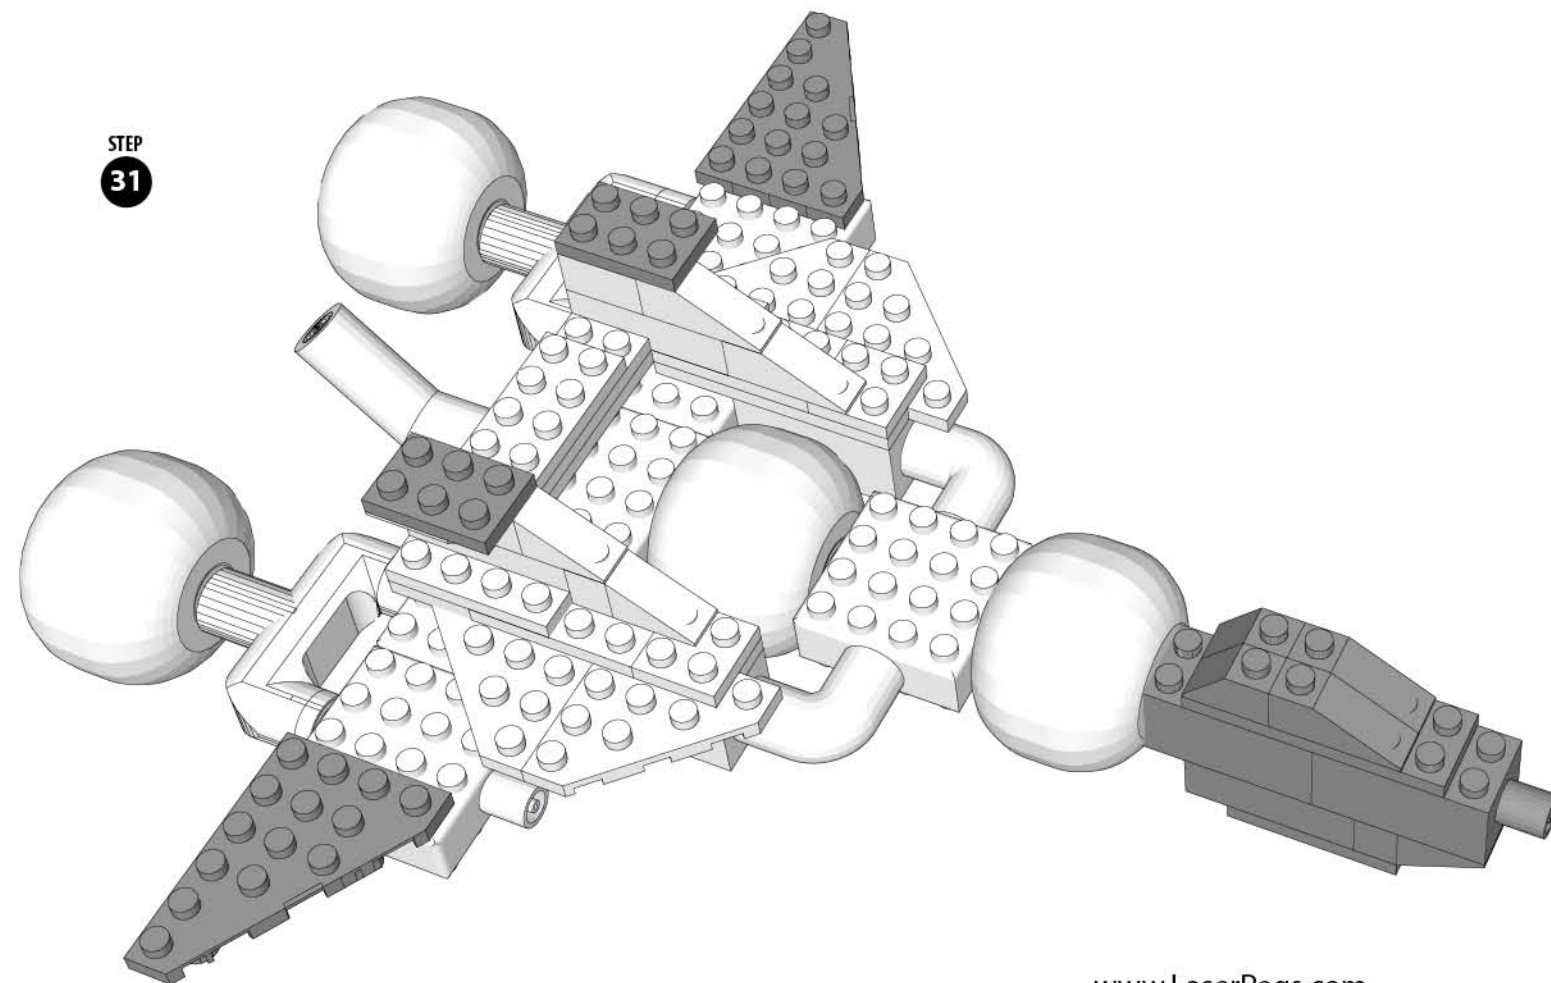

STEP
32
COMBINE C

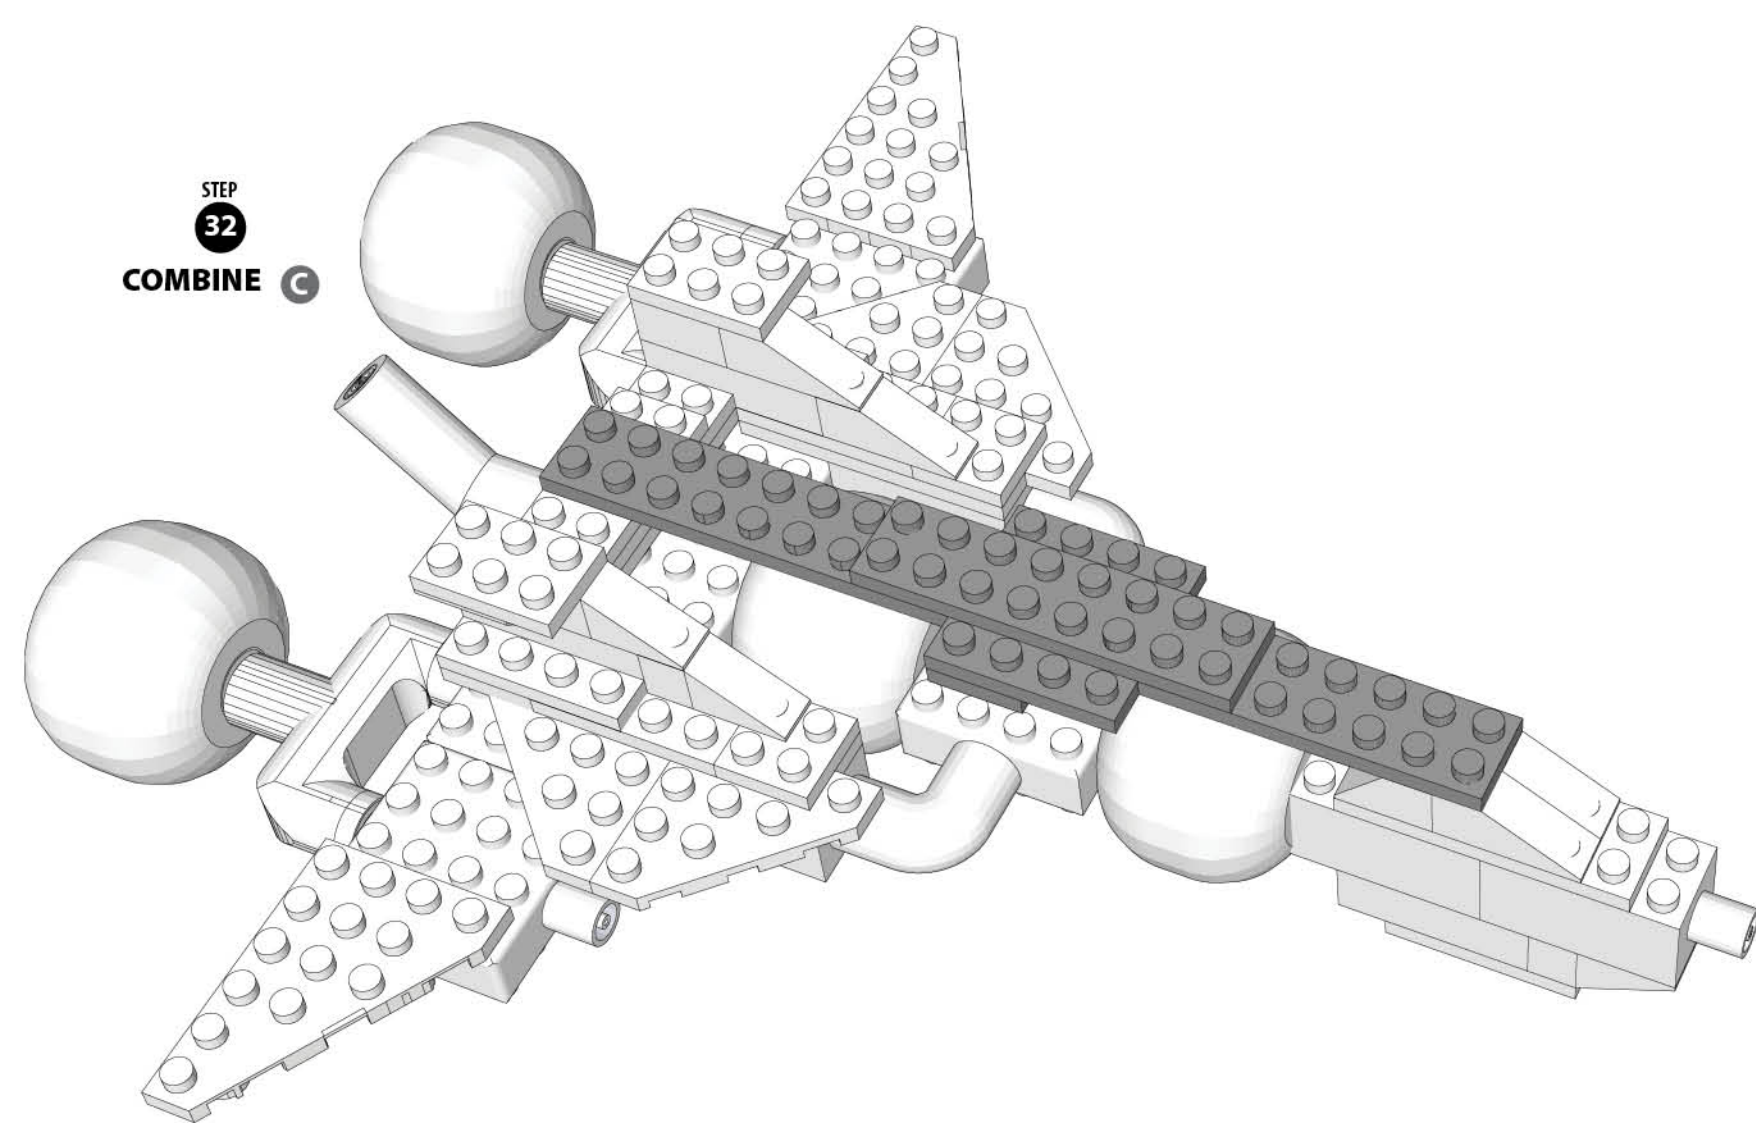

STEP
33
COMBINE B

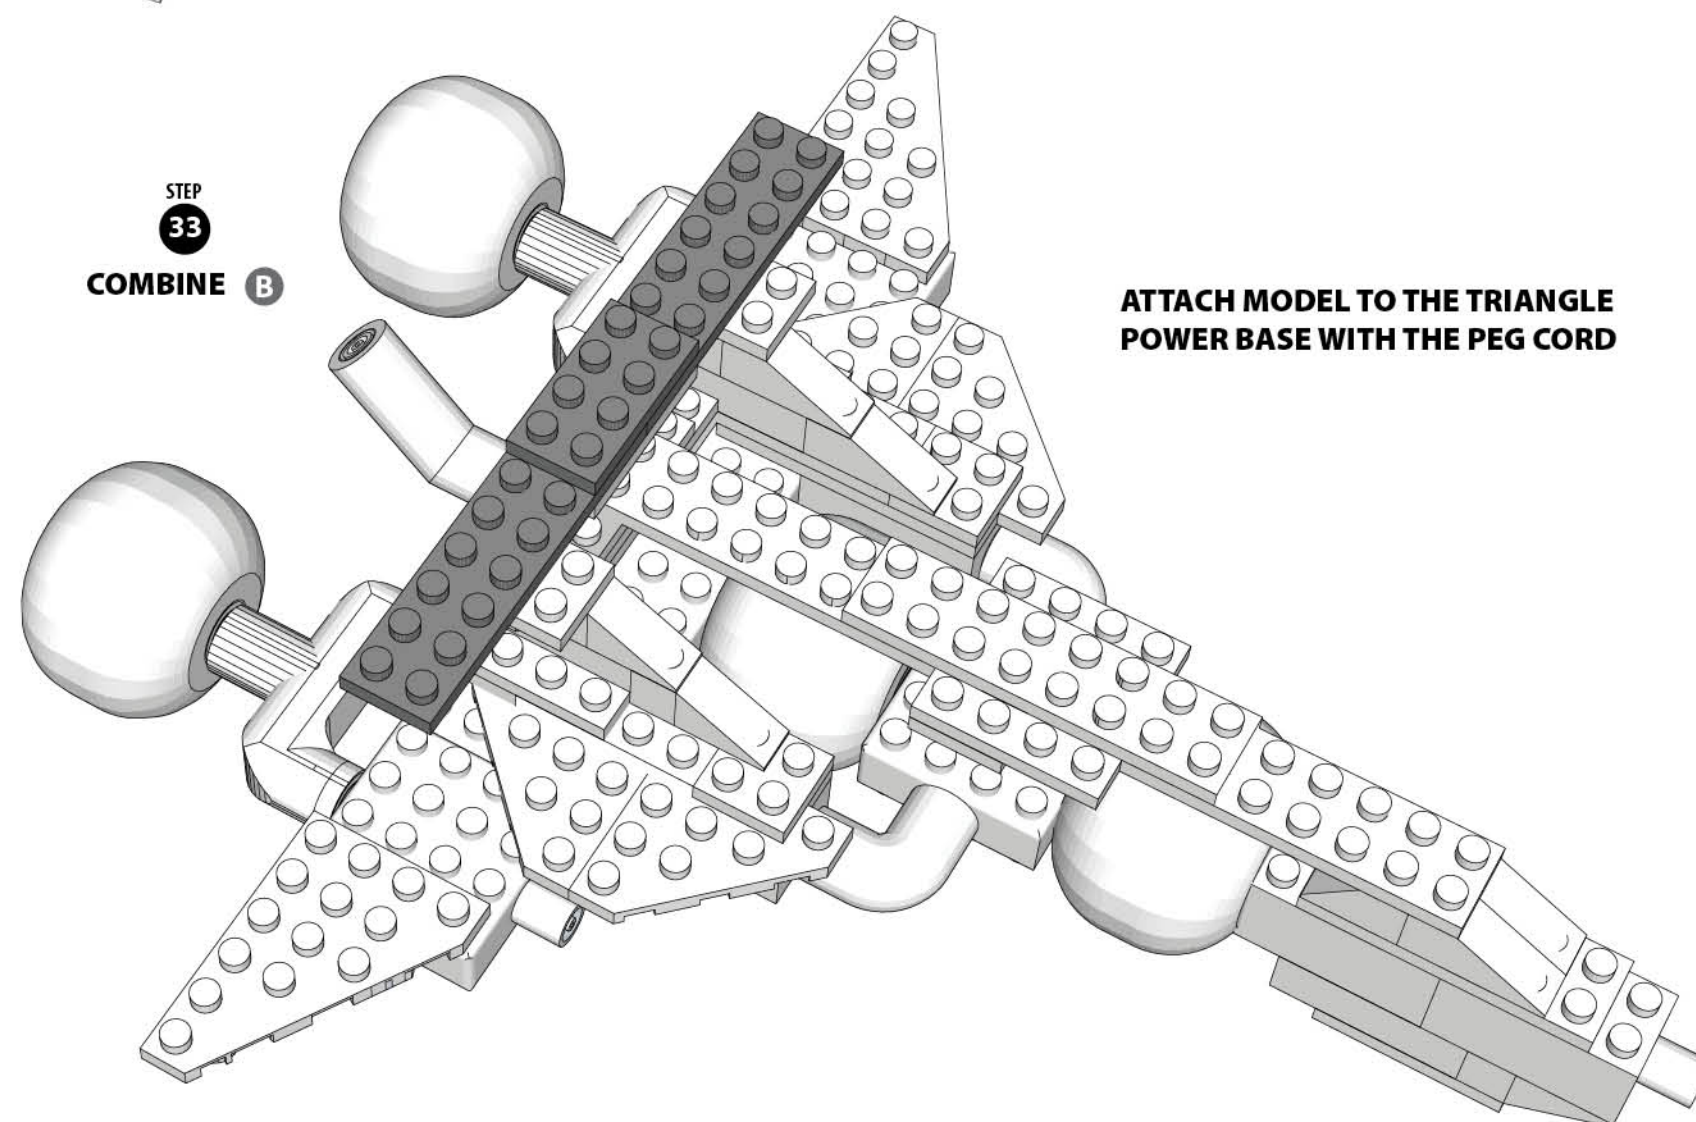

ATTACH MODEL TO THE TRIANGLE
POWER BASE WITH THE PEG CORD

